




OMNIKEY

Contactless Smart Card Readers

Developer Guide

5321-903, Rev. B.4
January 2015

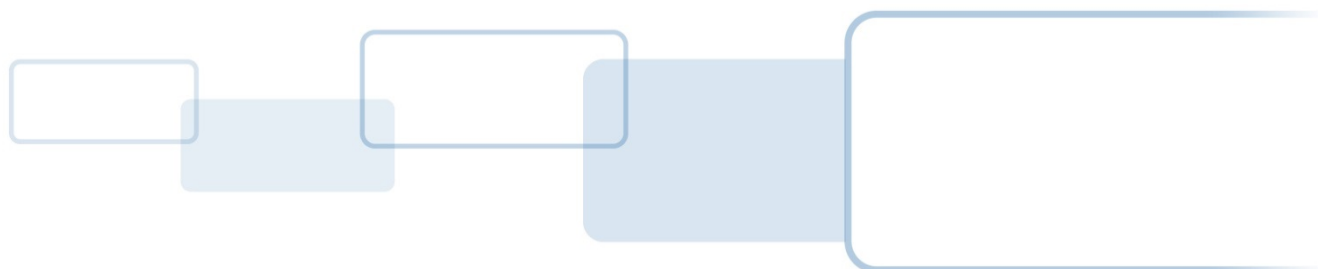



Contents

1	Purpose	7
2	Contactless Reader Coverage	7
3	Getting Started	8
3.1	Driver Installation.....	8
3.1.1	Reader Name for Contact/Contactless Slot.....	12
3.2	OMNIKEY Workbench.....	12
3.2.1	PC/SC Functionality and Reader Availability.....	12
3.2.2	Driver Version Detection.....	13
3.2.3	OMNIKEY Proprietary API Detection.....	13
3.2.4	Card and Reader Detection.....	14
3.2.5	Card Type Detection and RFID Settings.....	16
3.2.6	Air Interface Baud Rate Configuration.....	17
4	PC/SC 2.0	18
4.1	How to Access Contactless Cards through PC/SC.....	18
4.2	ATR Generation.....	20
4.2.1	CPU Cards.....	20
4.2.2	Storage Cards.....	20
5	Accessing Asynchronous Cards	21
5.1	MIFARE DESFire Card.....	21
5.1.1	Example: Write Card Data through ISO 7816-4 Framed APDU.....	21
5.1.2	Example: Read Card Data through ISO 7816-4 Framed APDU.....	22
6	Accessing Synchronous Cards (Storage)	23
6.1	MIFARE Card.....	23
6.1.1	MIFARE Increment (Card Command).....	24
6.1.2	MIFARE Decrement (Card Command).....	24
6.1.3	MIFARE Emulation Mode.....	25
6.1.4	MIFARE Application Directory (MAD).....	25
6.2	iCLASS Card.....	26
6.2.1	Card Access through SCardCLICCTransmit.....	26
6.3	ST LRI64 Support (PC/SC 2.0 add-on).....	27
6.3.1	Update Binary.....	28
6.3.2	Read Binary.....	29
6.4	ISO15693-3 Memory Card Support.....	29
7	Communication with MIFARE Plus	30
7.1	ISO 14443 A - Part 4 card communication.....	30
7.2	ISO 14443 A - Part 3 card communication.....	30
7.3	Open Generic Session.....	31
7.4	Generic Card Commands.....	31
7.4.1	MIFARE Plus commands with the GENERIC INTERFACE Command APDU Samples.....	32
7.5	Close Generic Session.....	32
8	OMNIKEY Contactless Smart Card Reader Keys	33
8.1	Key Numbering Scheme.....	33
8.2	Key Container and Slots.....	35
8.3	Key Update Rules.....	36
9	Standard Communication with iCLASS Card	37
9.1	APDU Structure for Standard Communication.....	37
9.2	Commands Available in Standard Communication Mode.....	37

- 9.2.1 Select Page (Card Command).....38
- 9.2.2 Load Key.....39
- 9.2.3 GetKeySlotInfo (Reader Command).....41
- 9.2.4 Authenticate (Card Command).....42
- 9.2.5 Read (Card Command)43
- 9.2.6 Update (Card Command).....44
- 9.3 Communication in Standard Mode45
- 10 Secured Communication with the iCLASS Card46**
- 10.1 Multi-Step Approach to a Secure Card Reader System 46
- 10.1.1 Authenticity between Host and Reader.....46
- 10.1.2 Confidentiality of USB Data Exchange.....46
- 10.1.3 Integrity of Transmitted Data.....46
- 10.1.4 Authenticity between Reader and Card46
- 10.1.5 Integrity of the Radio Frequency (RF) Transmission.....46
- 10.1.6 Confidentiality of the RF Transmission47
- 10.1.7 Authentication of the Host for Read/Write Session.....47
- 10.1.8 Protection against Known Attacks.....47
- 10.2 APDU Structure for Secured Communication..... 48
- 10.2.1 Data Header (DH)49
- 10.2.2 Signature Generation49
- 10.2.3 Session Key Generation49
- 10.2.4 Proprietary Host and Reader Datagram Example.....50
- 10.3 Instructions (INS) for Secured Communication51
- 10.3.1 Manage Session (Reader Command).....51
- 10.3.2 Select Page (Card Command).....52
- 10.3.3 Load Key (Reader Command)52
- 10.3.4 Authenticate (Card Command).....52
- 10.3.5 Read (Card Command)52
- 10.3.6 Update (Card Command).....52
- 10.3.7 GetKeySlotInfo (Reader Command).....52
- 10.3.8 Update Card Key.....53
- 10.4 Communication at Secured Mode.....54
- 10.5 Session at Secured Mode APDUs Example55
- 11 Reading ISO15693 58**
- 11.1 Products58
- 11.2 Tags58
- 11.3 Commands.....59
- 11.3.1 Get Data59
- 11.3.2 Put Data60
- 11.3.3 Lock61
- 11.3.4 Get Security Status62
- 11.3.5 Read Binary Command.....64
- 11.3.6 Update Binary Command.....65
- 11.3.7 Update Single Byte Command.....66
- 12 OMNIKEY 5321 PAY Application Interface 67**
- 12.1 PayPass Card Transactions67
- 12.2 LED and Buzzer Control67
- 12.2.1 SIGNAL Command - PayPass Signal.....68
- 12.2.2 SIGNAL Command - PayPass Signal MAIN LED68
- 12.2.3 SIGNAL Command - PayPass Signal Additional LEDs69
- 12.2.4 SIGNAL Command - PayPass Signal Tone69
- 12.3 Switch-over the Operating Mode 70



13	Driver Configuration via ProxFormat	71
13.1	Overview	71
13.2	ATR Format.....	71
13.2.1	ATR Example	71
13.3	Available ProxFormat Settings.....	72
13.3.1	ProxFormat Settings on Systems Running Windows	73
13.3.2	ProxFormat Settings on Systems Running Linux and MacOS X	73
14	ProxFormat Settings	74
14.1	Wiegand Raw Data Mode	74
14.2	Standard Format Modes.....	74
14.3	Automatic Mode.....	74
14.4	Custom Format Mode.....	75
14.4.1	CustomProxFormat Settings	75
14.5	Example: H10301 PROX Card	76
14.5.1	Standard Format.....	76
14.5.2	Wiegand Raw Data.....	76
14.5.3	CustomProxFormat Settings	76
14.5.4	ATRs of a H10301 Card.....	76
14.6	Example: H10302 PROX Card	77
14.6.1	Standard Format.....	77
14.6.2	Wiegand Raw Data.....	77
14.6.3	CustomProxFormat Settings	77
14.6.4	ATRs of a H10302 Card	77
14.7	Example: H10304 PROX Card	78
14.7.1	Standard Format.....	78
14.7.2	Wiegand Raw Data.....	78
14.7.3	CustomProxFormat Settings	78
14.7.4	ATRs of a H10304 Card.....	78
14.8	Example: Corp 1000 PROX Card	79
14.8.1	Standard Format.....	79
14.8.2	Wiegand Raw Data.....	79
14.8.3	CustomProxFormat Settings	79
14.8.4	ATRs of a Corp 1000 Card.....	79

Copyright

©2011 - 2015 HID Global Corporation/ASSA ABLOY AB. All rights reserved. This document may not be reproduced, disseminated or republished in any form without the prior written permission of HID Global Corporation.

Trademarks

HID GLOBAL, HID, the HID logo, iCLASS, iCLASS Elite, OMNIKEY, and Seos are the trademarks or registered trademarks of HID Global Corporation, or its licensors, in the U.S. and other countries.

MIFARE, MIFARE DESFire, MIFARE DESFire EV1, and MIFARE Ultralight are registered trademarks of NXP B.V. and are used under license.

my-d is a registered trademark of Infineon Technologies

PayPass is a registered trademark of MasterCard

Document History

Version	Author(s)	Date	Description
B.4	CT	2014-01-20	OMNIKEY 5421, reformat.
B.3	J. Maatuq	2012-03-23	- Corrected product name •OMNIKEY 5321 Pay -> OMNIKEY 5321 PAY - Some layout changes - typo corrections
B.2	J. Maatuq	2012-02-09	Added new products 4121 CL, 5021 CL, 5321 CLi, 5321 Pay, 5325 Prox Added new products and documented Workbench Added Driver Configuration via ProxFormat and ProxFormat Settings section
B.1	W Waitz	2010-11-10	Added iCLASS Elite enabled readers. Modified section 10.3.4 Get Security Status
B.0	W Waitz	2010-08-05	MIFARE Plus, PAY API and Review
A.1.19	S Schwab	2009-07-17	Chapter 9, supported tags
A.1.18	S Schwab	2009-07-16	Added footnotes for iCode SL2
A.1.17	W Waitz	2009-05-13	Review to version 1.16 and error correction
A.0	T Muth	2009-02-16	Updated to HID template



Firmware History

FW Version	Special Features	Remarks
5.20, 1.75	MIF, MKS, IST, ISE, EMD, HSK,	iCLASS secured mode, HID application read, iCLASS High Security Key supported, EMD Suppression in firmware supported, EMVCo Contactless L1
5.10	MIF, MKS, IST, ISE	iCLASS secured mode, HID application read
5.00	MIF, MKS, IST, ISE	iCLASS secured mode, HID application read
1.03, 1.04	MIF, MKS, IST	iCLASS memory access
1.01, 1.02	MIF, MKS	
1.00	MIF	MIFARE support

Synchronous Card Special Features

- MIF = MIFARE Functionalities
- MKS = MIFARE Key Storage
- MSK = MIFARE Secured Key Loading
- IST = iCLASS Standard Mode Communication
- ISE = iCLASS Secured Mode Communication
- EMD = Electromagnetic Disturbance
- HSK = High Security Key

Contacts

For additional offices around the world, see www.hidglobal.com corporate offices.

Americas & Corporate	Asia Pacific
611 Center Ridge Drive Austin, TX 78753 USA Phone: 866-607-7339 Fax: 949-732-2120	19/F 625 King's Road North Point, Island East Hong Kong Phone: 852 3160 9833 Fax: 852 3160 4809
Europe, Middle East and Africa	Brazil
Phoenix Road Haverhill, Suffolk CB9 7AE England Phone: +44 1440 711 822 Fax: +44 1440 714 840	Condomínio Business Center Av. Ermano Marchetti, 1435 Galpão A2 CEP 05038001 Lapa - São Paulo/SP Brazil Phone: 55 11 5514-7100
HID Global Customer Support: support.hidglobal.com	

1 Purpose

This is a guide for developers integrating contactless storage or CPU cards using OMNIKEY® Contactless Smart Card readers.

2 Contactless Reader Coverage

The following OMNIKEY contactless readers are covered by this document:

- **OMNIKEY 4121 CL**
Mobile Smart Card including an Express Card interface with the same functionality as OMNIKEY 5321, but it has a contactless interface.
- **OMNIKEY 5021 CL**
Desktop reader in a closed small housing with the same functionality as the OMNIKEY 5321, but a contactless-only reader.
- **OMNIKEY 5321**
Desktop Smart Card reader with contact and contactless interface, contactless interface featuring full contactless functionality as described in this developers guide.
- **OMNIKEY 5321 CL**
Desktop reader in a closed housing, same functionality as OMNIKEY 5321 but contactless-only reader.
- **OMNIKEY 5321 CR**
Desktop reader in a waterproof (Clean Room) closed housing, same functionality as OMNIKEY 5321 but contactless-only reader.
- **OMNIKEY 5321 CLI**
Desktop Smart Card reader in a closed housing, with contactless-only interface. Contactless interface supports iCLASS-only.
- **OMNIKEY 5321 PAY**
Desktop reader in a closed housing, same functionality as OMNIKEY 5321. Has EMVCo Terminal Level 1 approval according to EMV 2.0 specification [EMVCo].
- **OMNIKEY 5325 Prox**
Desktop Smart Card reader with contact and contactless interface. Contactless interface features operating on 125 kHz (Prox). Section 3 PC/SC 2.0 is applicable for this reader.
- **OMNIKEY 5421**
Desktop Smart Card reader with contact and contactless interface. The functionality is the same as the OMNIKEY 5321, but it uses a different transceiver chip.
- **OMNIKEY 6321**
Mobile Smart Card reader with SIM-sized contact and contactless interface. Contactless interface features full contactless functionality.
- **OMNIKEY 6321 CLI**
Mobile Smart Card reader with contactless-only interface. Contactless interface supports iCLASS only.
- **Readers with iCLASS Elite Key**

All enabled iCLASS Elite Key readers (list previously) are covered by this document.

All readers listed are based on the OMNIKEY Contactless Smart Card RFID chipset. Therefore this document uses the term **5x21** to reference these OMNIKEY readers.

3 Getting Started

This chapter describes how to install the drivers necessary to operate the OMNIKEY Contactless Smart Card reader in a Windows based environment.

Note: Other operating systems, such as Linux, are also supported by the OMNIKEY Contactless Smart Card reader.

3.1 Driver Installation

The OMNIKEY Contactless Smart Card driver is mandatory for all systems that require support for contactless smart cards.

OMNIKEY Contactless Smart Card reader is a CCID compliant device. This means that the contact interface can be operated without an OMNIKEY proprietary driver installed. However, for contactless cards, the OMNIKEY proprietary OMNIKEY Contactless Smart Card driver is necessary.

The following steps describe how to install the OMNIKEY Contactless Smart Card driver:

1. Go to <http://www.hidglobal.com/omnikey>. Based on the appropriate reader, click the driver icon. Download the latest OMNIKEY Contactless Smart Card driver installation package for Windows.
2. Run the installation package and follow the instructions. The installation package extracts all the necessary driver files to your hard drive. Take note of the location to which the files were copied.
3. Connect the reader to your computers USB port. At this time you have only extracted, not installed the driver files.
4. The **Found New Hardware Wizard** appears. To continue driver installation, click **Next**.




Note: On Windows XP systems, the Microsoft Windows CCID Class driver may be activated without showing the **Found New Hardware Wizard**. If this is the case, replace the Microsoft PC/SC driver manually with the OMNIKEY proprietary PC/SC driver using the Device Manager.


5. Select **Search for a suitable driver for my device** (recommended) and click **Next**.



6. Then, select **Specify a Location** and click **Next**.

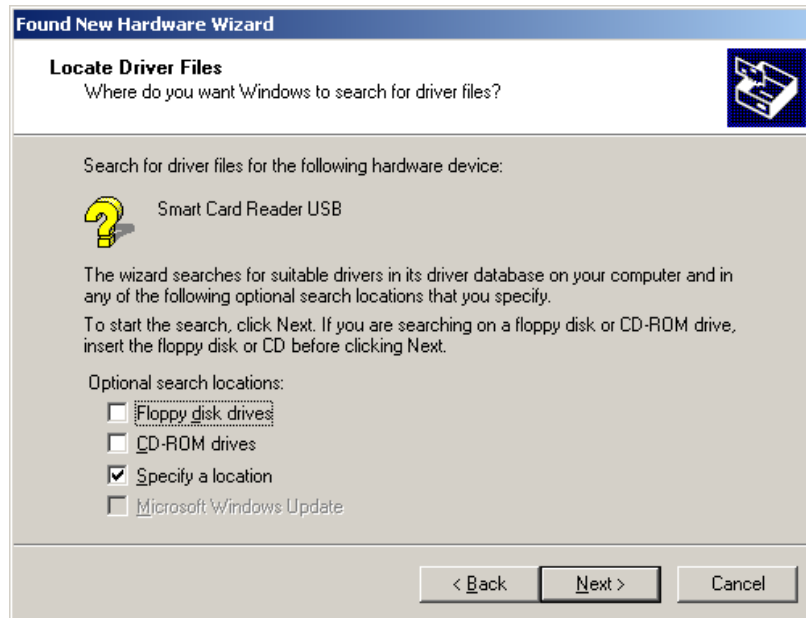

- Click **Browse** and go to the location where you previously installed the driver package. To continue, click **OK**.

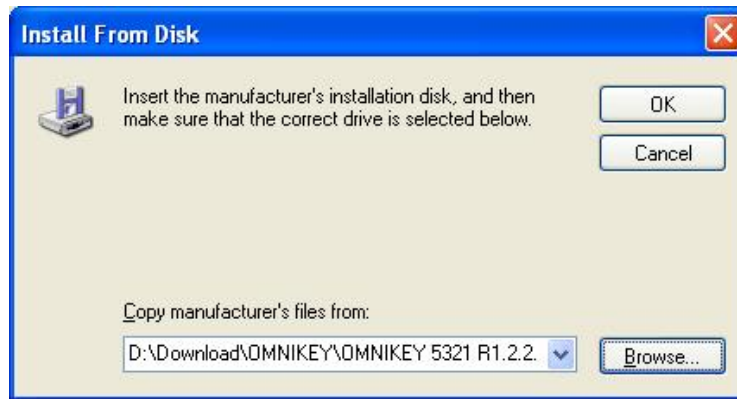

- If the driver was found, click **Next**.



9. If the driver is a beta driver and not digitally signed, the following dialogue appears. Click **Continue Anyway**.



10. The following message appears and the green LED illuminates on the OMNIKEY Contactless Smart Card reader.



If the installation was successful, the green LED on the reader illuminates and the reader is listed in the OMNIKEY Workbench as OMNIKEY Contactless Smart Card reader.

Your reader is ready for use. Do a quick smart card system check using the OMNIKEY Workbench described in *Section 3.2 OMNIKEY Workbench*.

3.1.1 Reader Name for Contact/Contactless Slot

The OMNIKEY Contactless Smart Card reader is a dual slot reader. This means that from the application and smart card resource manager viewpoint there are two readers available, each represented by its respective reader name. **OMNIKEY CardMan 5x21 n** identifies the contact slot and **OMNIKEY CardMan 5x21-CL n** stands for the contactless slot. The **n** represents a slot number 0, 1... etc. This allows card tracking through the contact and air interface.

3.2 OMNIKEY Workbench

The OMNIKEY Workbench provides a quick test of the smart card system. It lists all available OMNIKEY readers, driver files with version, firmware version, and allows the configuration of the RFID/air interface.

Go to <http://www.hidglobal.com/omnikey> > select the **OMNIKEY Reader** > click the driver icon to download the latest OMNIKEY Workbench for Windows.

Start former versions of the Diagnostic Tool from the **Control Panel**.

3.2.1 PC/SC Functionality and Reader Availability

The **General** Information application shows in the **PC/SC Functionality** tab if the **Resource Manager** is running and lists all connected OMNIKEY readers.

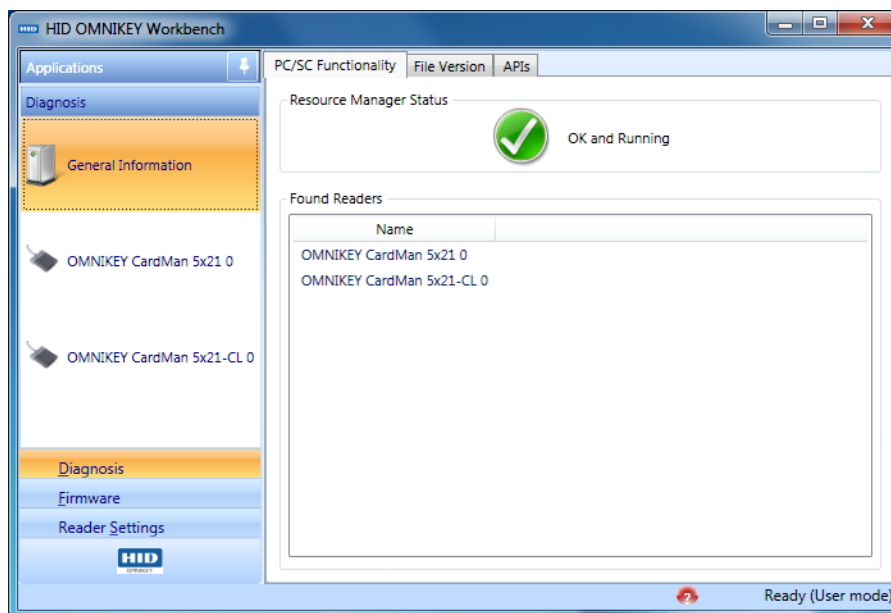


Figure 1: PC/SC Functionality

3.2.2 Driver Version Detection

In addition, the **File Versions** tab shows smart card system services version, manufacturer data and driver files.

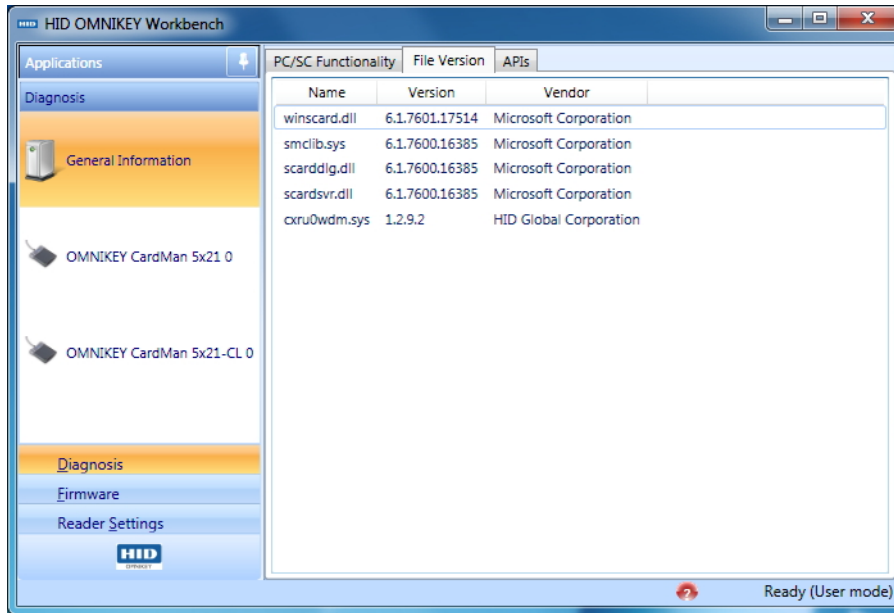


Figure 2: File Version

3.2.3 OMNIKEY Proprietary API Detection

The **API** tab shows the APIs installed on your system, including the OMNIKEY Synchronous API.

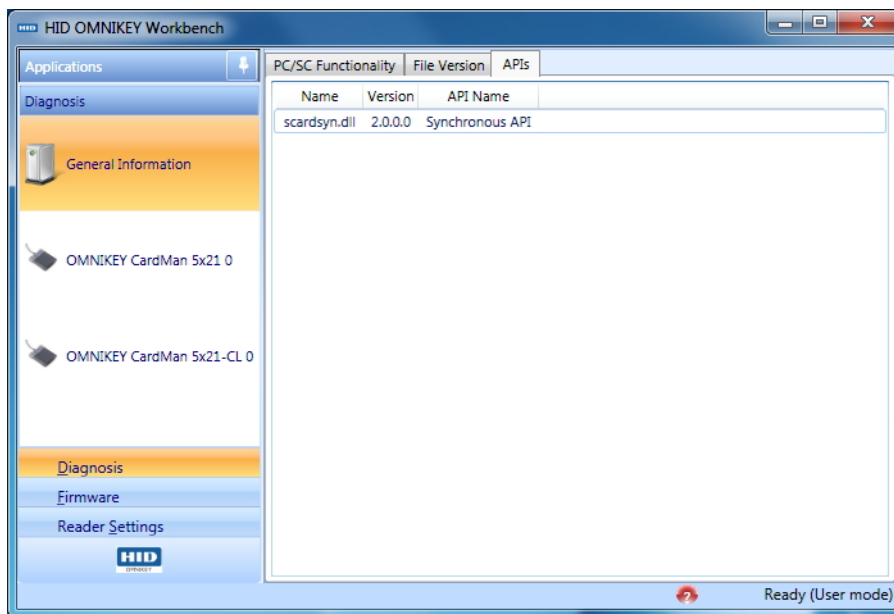


Figure 3: API

3.2.4 Card and Reader Detection

The OMNIKEY Workbench creates a separate entry for each available OMNIKEY reader interface in the application table. The entries indicate their respective reader names - the same names you use within the PC/SC framework. Click an entry to open the reader's information and settings.

For a quick connectivity test of your contactless card,

1. Select the **OMNIKEY CardMan 5x21-CL 0** tab
2. Place a contactless card on the reader.
3. When the card is detected, the Status field switches from **No smart card inserted** to **Smart card inserted** and the ATR field displays the card's ATR.

See *Section 4.2 ATR Generation*, for further information on how the Answer to Reset (ATR) is generated for contactless smart cards.

The OMNIKEY Workbench has an internal flat database that allows a quick lookup of the ATR. If it is a known card, a description displays in the **Smart Card Name** field. For contactless cards the card's unique ID (UID) displays in the **Smart Card Name** field and in the **Protocol** field the card standard for example, T=CL and the selected baud rate displays.

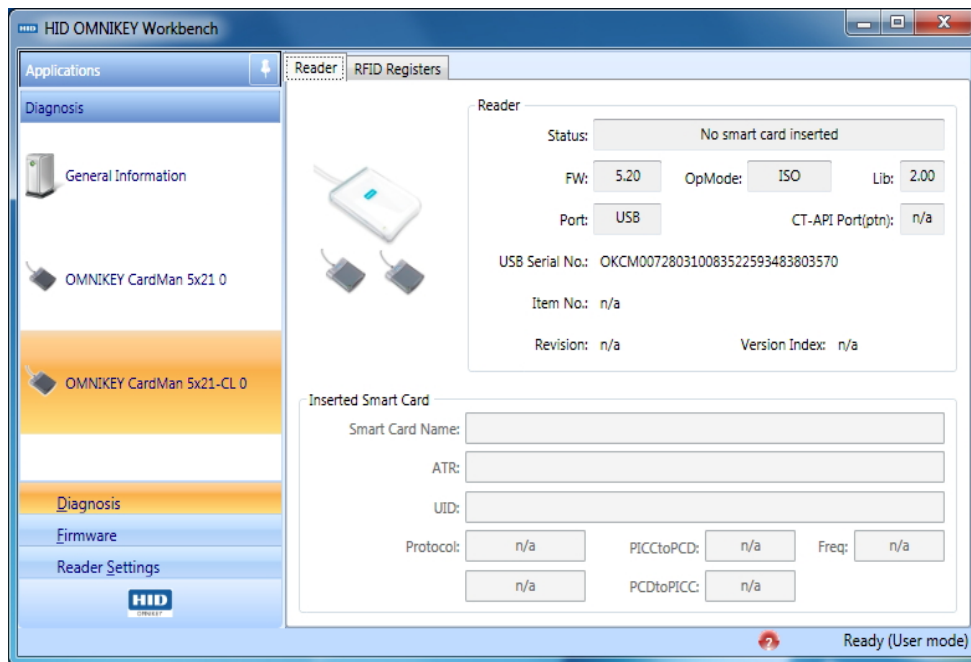


Figure 4: Reader View - No Smart Card

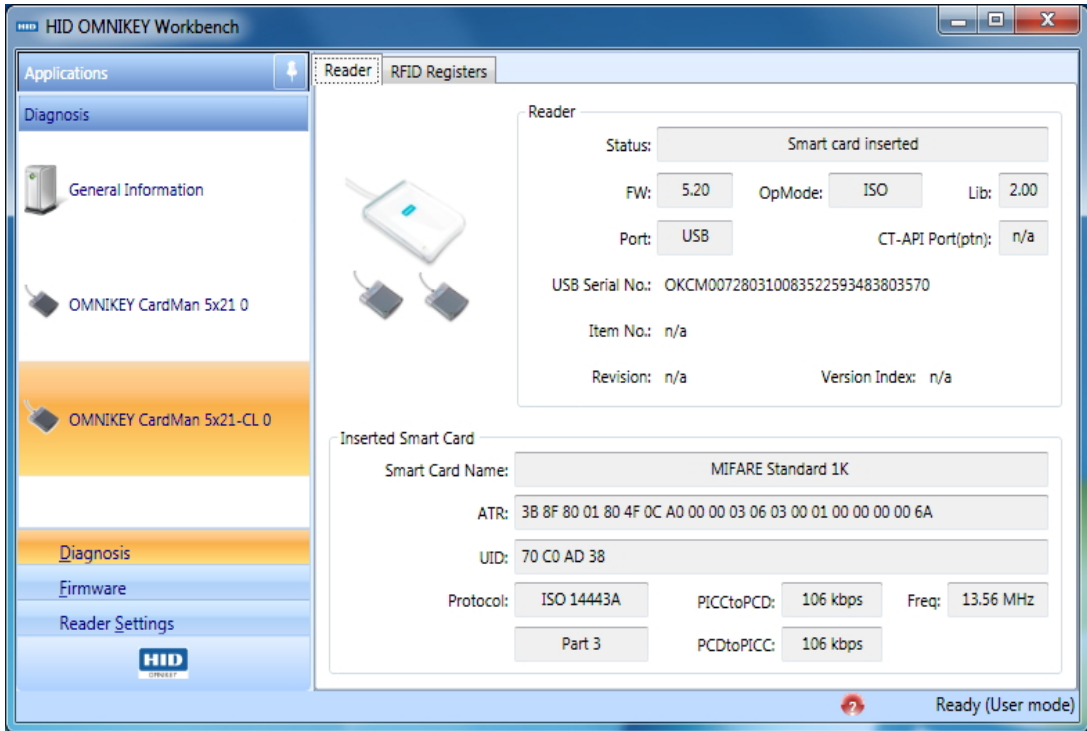


Figure 5: Reader View - Smart Card Inserted

3.2.5 Card Type Detection and RFID Settings

OMNIKEY Contactless Smart Card reader supports multiple 13.56 MHz contactless standards and protocols including ISO14443A, ISO14443B, ISO15694, iCLASS, I-CODE. Acquire information about a card within the RFID field in a predefined search order. With built-in anti-collision, once a card is detected it is the only card in which the reader is connected.

The OMNIKEY Workbench has a **RFID Settings** tab within the reader view that allows configuration of the reader card and their respective search order. See *Section 3.2.4 Card and Reader Detection*.

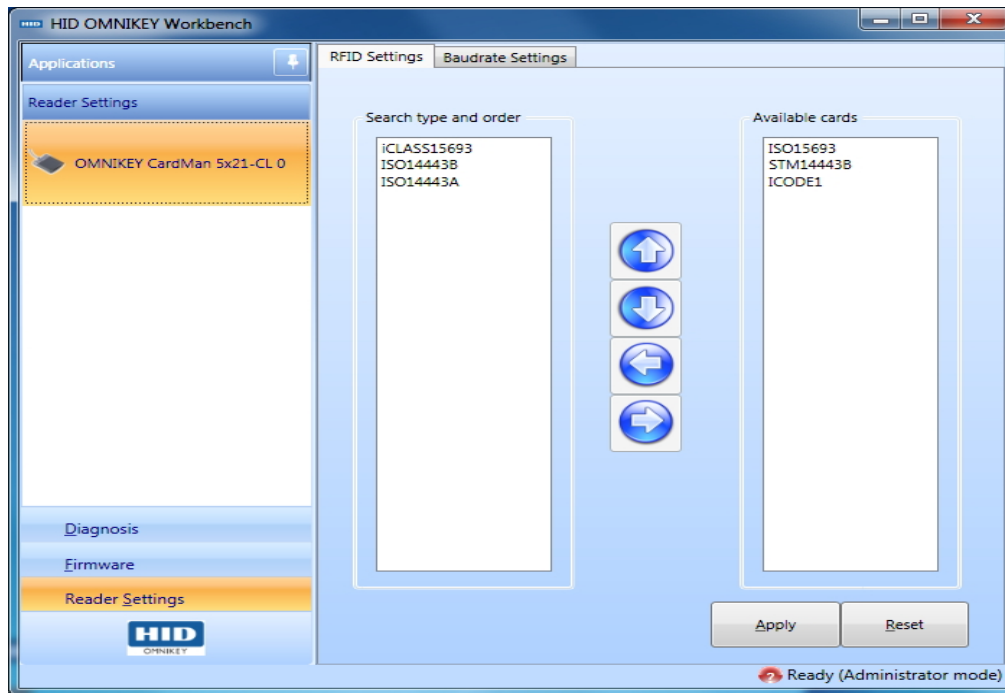


Figure 6: RFID Settings

The left pane contains a list of active card types. The right pane contains a list of available card types that are supported by the reader but are not included in the card search. Move card types from the left to the right pane using the ◀ and ▶ buttons. Change the search order with the ▲ and ▼ buttons.

Activate this setting using the **Apply** button. The **Reset** button discards any unsaved changes.

Note: The search order is forward-looking to improve system performance. The last successfully detected card type automatically moves to the top of the search order, regardless of its position within the order set on the **RFID Settings** tab.

3.2.6 Air Interface Baud Rate Configuration

For ISO 14443 cards, the air interface transmission speed can be 106 kbps, 212 kbps, 424 kbps, or 848 kbps. By default, the contactless interface is set to 424 kbps. Change the interface transmission speed to a different value through the OMNIKEY Workbench **Baudrate settings** tab.

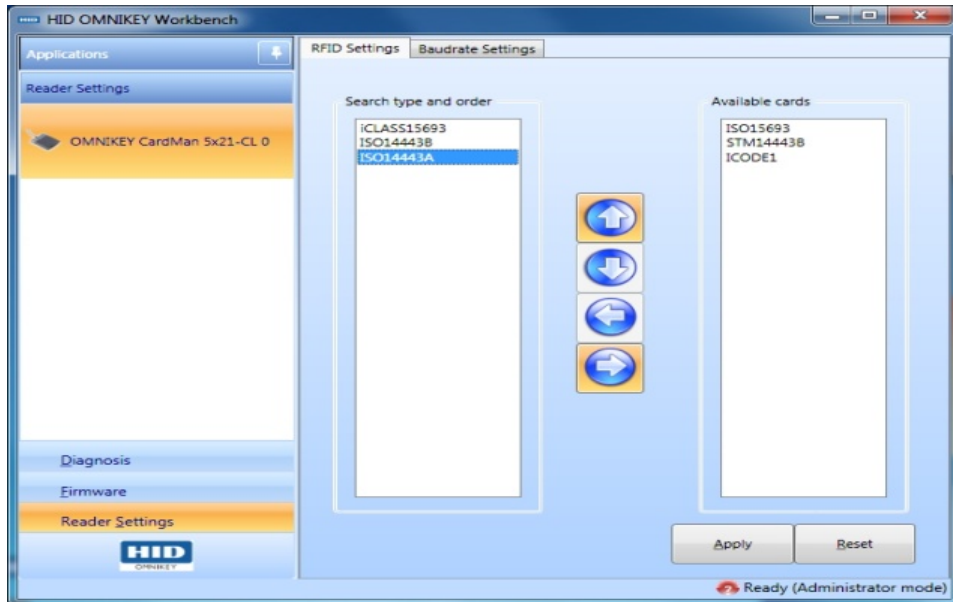


Figure 7: RFID Settings

To view or change the baud rate, select the card type (ISO14443A or ISO14443B) and change the maximum **Baud Rate** field. Finalize your setting, click **Apply**.

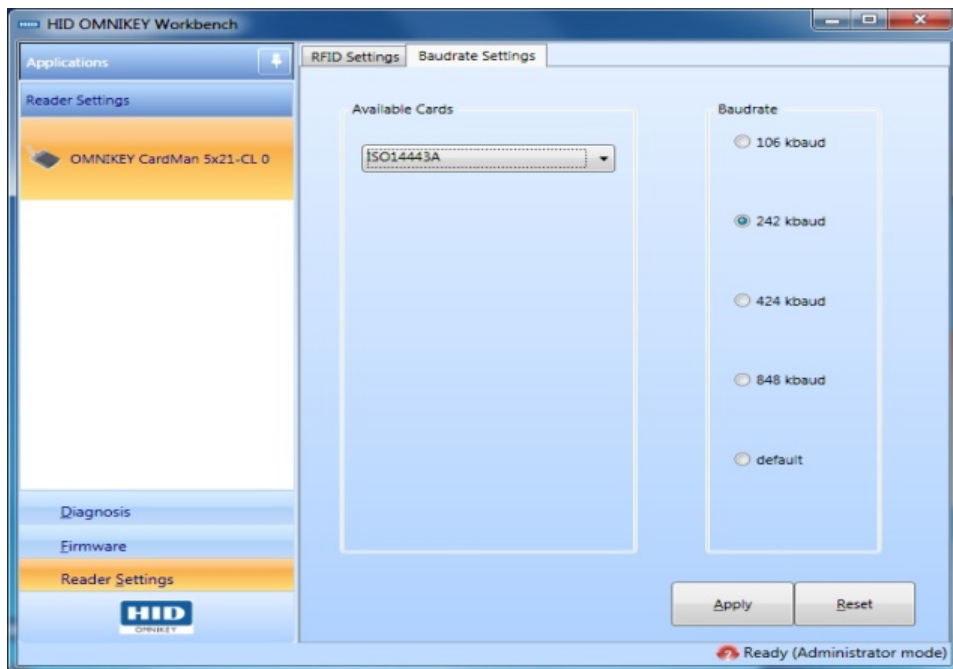


Figure 8: Baud Rate Settings

4 PC/SC 2.0

With the OMNIKEY 5x21 PC/SC driver, access ISO14443A/B or ISO15693 contactless cards through the same framework as ISO7816 contact cards. This makes card integration a snap for any developer who is already familiar with PC/SC. Even valuable PC/SC resource manager functions, such as card tracking, are available for contactless card integration.

The Microsoft® Developer Network (MSDN®) Library contains valuable information and a complete documentation of the SCard API within the MSDN Platform SDK.

See <http://msdn.microsoft.com/en-us/library/ms953432.aspx>.

You can directly access contactless CPU cards through the PC/SC driver. For storage cards other than MIFARE®, an additional library – the OMNIKEY synchronous API – is necessary. Whether using direct PC/SC access or the OMNIKEY synchronous API, only a small set of functions are required to write your first **hello card** program.

	Integrate your card through:	
	PC/SC 2.0 compliant APDU's	OMNIKEY Synchronous API
MIFARE	YES	YES
iCLASS	NO	YES
LRI64	YES	NO

4.1 How to Access Contactless Cards through PC/SC

The following steps provide a guideline to create your first contactless smart card application using industry standard, PC/SC compliant API function calls. The function definitions provided are taken verbatim from the MSDN Library [MSDNLIB]. For additional descriptions of these and other PC/SC functions provided by the Microsoft Windows PC/SC smart card components, refer directly to the MSDN Library. See <http://msdn.microsoft.com/en-us/library/ms953432.aspx>.

1. Establish Context

This step initializes the PC/SC API and allocates all resources necessary for a smart card session. The **SCardEstablishContext** function establishes the resource manager context (scope) within which database operations is performed.

```
LONG SCardEstablishContext( IN DWORD dwScope,
                           IN LPCVOID pvReserved1,
                           IN LPCVOID pvReserved2,
                           OUT LPSCARDCONTEXT phContext);
```

2. Get Status Change

Check the status of the reader for card insertion, removal, or availability of the reader. This **SCardGetStatusChange** function blocks execution until the current availability of the cards in a specific set of readers change. The caller supplies a list of monitored readers and the maximum wait time (in milliseconds) for an action to occur on one of the listed readers.

```
LONG SCardGetStatusChange( IN SCARDCONTEXT hContext,
                           IN DWORD dwTimeout,
                           IN OUT LPSCARD_READERSTATE rgReaderStates,
                           IN DWORD cReaders);
```

3. List Readers

Gets a list of all PC/SC readers using the **SCardListReaders** function. Look for **OMNIKEY CardMan 5x21-CL 0** in the returned list. If multiple OMNIKEY Contactless Smart Card readers are connected to your system, they will be enumerated.

Example: OMNIKEY CardMan 5x21-CL 1, and OMNIKEY CardMan 5x21-CL 2.

Analyze the complete string. OMNIKEY CardMan 5x21 also has a contact interface. Look for **-CL** in the reader name to ensure you are referring to the contactless interface in the following calls.

```
LONG SCardListReaders( IN SCARDCONTEXT hContext,
                      IN LPCTSTR mszGroups,
                      OUT LPTSTR mszReaders,
                      IN OUT LPDWORD pcchReaders);
```

4. Connect

Connect to the card. The **SCardConnect** function establishes a connection (using a specific resource manager context) between the calling application and a smart card contained by a specific reader. If no card exists in the specified reader, an error is returned.

```
LONG SCardConnect( IN SCARDCONTEXT hContext,
                  IN LPCTSTR szReader,
                  IN DWORD dwShareMode,
                  IN DWORD dwPreferredProtocols,
                  OUT LPSCARDHANDLE phCard,
                  OUT LPDWORD pdwActiveProtocol);
```

5. Exchange Data and Commands with the Card

Exchange command and data through APDUs. The **SCardTransmit** function sends a service request to the smart card, expecting to receive data back from the card.

```
LONG SCardTransmit( IN SCARDHANDLE hCard,
                   IN LPCSCARD_IO_REQUEST pioSendPci,
                   IN LPBYTE pbSendBuffer,
                   IN DWORD cbSendLength,
                   IN OUT LPCSCARD_IO_REQUEST pioRecvPci,
                   OUT LPBYTE pbRecvBuffer,
                   IN OUT LPDWORD pcbRecvLength);
```

Note: For unsupported PC/SC 2.0 storage cards, call an OMNIKEY proprietary API function such as **SCardCLICCTransmit** instead. This function exposes additional functionality of the OMNIKEY 5x21-CL reader that is not yet defined in PC/SC standards. Otherwise, you are still using the standard PC/SC framework to track cards, list readers, etc. Even the smart card handle is the same.

6. Disconnect

It is not necessary to disconnect the card after the completion of transactions, but it is recommended. The **SCardDisconnect** function terminates a connection previously opened between the calling application and a smart card in the target reader.

```
LONG SCardDisconnect( IN SCARDHANDLE hCard,
                     IN DWORD dwDisposition);
```

7. Release

This step ensures all system resources are released. The **SCardReleaseContext** function closes an established resource manager context, freeing any resources allocated under that context.

```
LONG SCardReleaseContext( IN SCARDCONTEXT hContext);
```

4.2 ATR Generation

Unlike contact cards, contactless cards do not generate an ATR. Instead, they generate an Answer to Select (ATS). To make contactless cards available within the PC/SC framework, OMNIKEY Contactless Smart Card reader generates a PC/SC compliant ATR according to PC/SC v2.01.

Download the documents from the PC/SC Workgroup at the following web address:
<http://www.pcscworkgroup.com/specifications/specdownload.php>.

4.2.1 CPU Cards

Contactless smart cards (cards with a CPU) expose their ATS or information bytes through ATR mapping according to PC/SC 2.01 - *Part 3: Requirements for PC-Connected Interface Devices, section 3.1.3.2.3.1 Contactless Smart Cards, Table 3.5*.

4.2.2 Storage Cards

The ATR of storage cards (for example, cards without a CPU) is composed as described in PC/SC 2.01 - *Part 3: Requirements for PC-Connected Interface Devices, section 3.1.3.2.3.2 Contactless Storage Cards, Table 3.6*. For the host application to identify a storage and card type properly, its standard and card name is mapped according to PC/SC 2.01 - *Part 3: Requirements for PC-Connected Interface Devices - Supplemental Document*.

Note: The Registered Application Provider Identifier (RID) returned by the OMNIKEY Contactless Smart Card reader for storage cards (cards without a CPU) is A0 00 03 06 0A, indicating a PC/SC compliant ATR generation.

5 Accessing Asynchronous Cards

Asynchronous cards contain a CPU or are memory cards accessible through standard PC/SC using Microsoft's library **winscard.dll**. This type of card supports at least one of the asynchronous protocols T=0 or T=1. The Microsoft Platform SDK contains PC/SC sample code for Visual C/C++ and Visual Basic.

No additional libraries or third-party software components are necessary to integrate contactless CPU cards.

5.1 MIFARE DESFire Card

MIFARE DESFire cards are accessed through ISO7816-4 compliant framed APDU commands (ISO7816-4 framing).

New versions of MIFARE DESFire EV1 cards support extended APDU commands. For this the driver must switch to MIFARE DESFire native mode. This native mode is not **default** for the OMNIKEY Contactless Smart Card reader. For proper protocol settings use the following registry key:

```
HKEY_LOCAL_MACHINE\SYSTEM\CurrentControlSet\Control\CardMan\RFID
DesfireNative=0x00000001
```

Note: Restart the OMNIKEY Contactless Smart Card driver after changing the registry key (disconnect and reconnect the reader).

5.1.1 Example: Write Card Data through ISO 7816-4 Framed APDU

Command Syntax

CLA	INS	P1	P2	Lc	File No.	Offset	Length	Data	Le
'90'	'3D'	'00'	'00'	'xx'	'xx'	'xxxxxx'	'xxxxxx'	'xx' ... 'xx'	'00'

Lc = 7+ DataLength; Le=0 (no other values accepted)

Response Syntax

Response Data	SW1	SW2
empty	'xx'	'xx'

Status Codes

SW1	SW2	Description
'90'	'00'	success
'91'	'xx'	error (see the MIFARE DESFire data sheet)

5.1.2 Example: Read Card Data through ISO 7816-4 Framed APDU

Command Syntax

CLA	INS	P1	P2	Lc	File No.	Offset	Length	Data	Le
'90'	'BD'	'00'	'00'	'07'	'xx'	'xxxxxx'	'LLLLLL'	empty	'00'

Le=0 (no other values accepted)

Response Syntax

Response Data	SW1	SW2
'xx' ... 'xx' ('LLLLLL' bytes)	'xx'	'xx'

Status Codes

SW1	SW2	Description
'90'	'00'	success
'91'	'xx'	error (see to the MIFARE DESFire data sheet)

6 Accessing Synchronous Cards (Storage)

OMNIKEY provides two ways to integrate contactless storage cards. One option is OMNIKEY’s proprietary synchronous API library, or for MIFARE cards, directly through PC/SC 2.0 compliant function calls. Access storage cards not supported through PC/SC 2.0 compliant APDU exchanges through OMNIKEY proprietary synchronous API.

The synchronous API for Windows systems resides in a DLL named scardsyn.dll. Download the Synchronous API for OMNIKEY Contactless Smart Card readers from www.hidglobal.com/omnikey and execute the setup

CardMan_Synchronous_API_V2_0_0_0.exe. The setup includes this DLL. The download also contains sample code for MIFARE and iCLASS cards. For information about this API, reference the help file cmsync.hlp available in the c:\Program Files\HID Global\Sync-API\Help folder after installation of the synchronous API with default settings.

The OMNIKEY Synchronous API is used whenever a card has not yet found its way into the PC/SC 2.0 standard. Currently, only MIFARE cards can be integrated through PC/SC 2.0 compliant APDU.

	Integrate Card through	
	PC/SC 2.0 compliant APDUs	OMNIKEY Synchronous API
MIFARE	Yes	Yes
iCLASS	No	Yes

No special drivers are required for PC/SC 2.0 compliant card integration with Windows or Linux. OMNIKEY’s latest drivers provide seamless cross-platform support allowing industry standard-compliant contactless card integration.

6.1 MIFARE Card

OMNIKEY Contactless Smart Card readers support MIFARE Mini, MIFARE 1K, MIFARE 4K and MIFARE Ultralight® cards.

The following functions are supported through PC/SC:

GetUID	Implemented according to [PCSC 2.01]
LoadKey	
Authenticate	
Verify	
Update Binary	
Read Binary	
Increment	OMNIKEY proprietary extension of PC/SC
Decrement	OMNIKEY proprietary extension of PC/SC
MIFARE Emulation Mode	OMNIKEY proprietary extension of PC/SC <i>CM_IOCTL_SET_RFID_CONTROL_FLAGS</i>

Reference the [PCSC 2.01] and [MIFARE] for documentation of PC/SC 2.0 compliant MIFARE card access. The following section only describes usage of functions that are not already documented in [PCSC 2.01]. They are part of an OMNIKEY proprietary extension of PC/SC.

6.1.1 MIFARE Increment (Card Command)

This command increments the value of a block, if the card and block supports this functionality:

Command Syntax

CLA	'FF'
INS	'D4'
P1	MSB of block address
P2	LSB of block address
LC	4
Data Field	Four bytes value indicating block increment (LSB first)
Le	empty

Response Syntax

Data Field		Empty
SW1	SW2	status word as described below
'90'	'00'	Success
'65'	'81'	memory failure (unsuccessful increment)
'69'	'81'	incompatible command
'69'	'82'	security status not satisfied
'69'	'86'	command not allowed
'6A'	'81'	function not supported
'6A'	'82'	invalid block address

6.1.2 MIFARE Decrement (Card Command)

This command decrements the value of a block, if the card and block support this functionality:

Command Syntax

CLA	'FF'
INS	'D8'
P1	MSB of block address
P2	LSB of block address
LC	4
Data Field	Four byte value indicating block decrement (LSB first)
Le	Empty

Response Syntax

Data Field		Empty
SW1	SW2	status word as described below
'90'	'00'	Success
'65'	'81'	memory failure (unsuccessful decrement)
'69'	'81'	incompatible command
'69'	'82'	security status not satisfied
'69'	'86'	command not allowed
'6A'	'81'	function not supported
'6A'	'82'	invalid block address

6.1.3 MIFARE Emulation Mode

By default, the OMNIKEY Contactless Smart Card driver exposes standard MIFARE storage cards through a PC/SC 2.01 compliant interface. This driver-level MIFARE emulation mode makes standard MIFARE cards available through standard APDUs even though the card itself does not support any asynchronous protocols supported directly by native PC/SC components.

Dual-interface cards work differently. Their CPU supports communication through ISO14443A part 4 (T=CL) allowing on-card MIFARE emulation rather than host-side MIFARE emulation. This means that OMNIKEY Contactless Smart Card reader's default mode (for example, host-side MIFARE emulation) must be disabled to support the on-card MIFARE emulation of a dial-interface card.

There are two ways to switch between host-side and card-side MIFARE emulation:

1. Registry keys
2. IO controls using the PC/SC function `ScardControl()` as described in Appendix [A2.8 MIFARE Emulation Mode \(OMNIKEY Proprietary API\)](#).

The following registry keys let you switch between OMNIKEY MIFARE emulation mode (default) and on-card MIFARE emulation.

```
HKEY_LOCAL_MACHINE\SYSTEM\CurrentControlSet\Control\CardMan\RFID
```

```
ControlFlags=0x00000004          OMNIKEY's host-side MIFARE emulation ON  
                                default
```

```
ControlFlags=0x00000000 OMNIKEY's host-side MIFARE emulation OFF  
                                T=CL, for on-card MIFARE emulation
```

Note: Restart the OMNIKEY Contactless Smart Card driver after changing the registry keys (disconnect and then reconnect the reader).

6.1.4 MIFARE Application Directory (MAD)

To access the MIFARE Application Directory (MAD), two commands are necessary - Authenticate and Read. The following steps describe how to retrieve a MAD from a MIFARE card:

1. Authenticate block 3 with the Public key **AOA1A2A3A4A5** and authentication mode A.
2. Read Block 3.
3. Read Block 2.
4. Read Block 1.

For information about the block content see:

http://www.nxp.com/acrobat_download2/other/identification/001830.pdf

<http://www.mifare.net>



6.2 iCLASS Card

Only access iCLASS cards through OMNIKEY’s proprietary scardsyn API. This synchronous API contains a function that is dedicated to accessing contactless cards using the standard PC/SC card handle.

OMNIKEY Contactless Smart Card readers expose all iCLASS functions necessary to access any of the application areas on an iCLASS card. The two modes of communication supported are:

1. Standard mode communication
2. Secured mode communication (OMNIKEY proprietary mode)

Note: OMNIKEY Contactless Smart Card readers do not allow **WRITE access to the HID application** (1st application on page 0). For **READ access to the HID application**, secured communication (available for firmware version 5.00 and greater) is mandatory.

Note: Standard readers provide secured mode communication only between standard HID iCLASS. However, there is also a possibility for secured mode communication between HID iCLASS Elite cards (available for firmware version 5.20 and greater). For details, contact your local Sales Representative.

6.2.1 Card Access through SCardCLICCTransmit

SCardCLICCTransmit is the OMNIKEY proprietary function to access HID iCLASS cards through the OMNIKEY synchronous API. It supports both, standard and secure communication modes and is defined as follows:

```
OKERR ENTRY SCardCLICCTransmit (      IN SCARDHANDLE ulHandleCard,
    IN PCHAR      pucSendData,
    IN ULONG      ulSendDataBufLen,
    IN OUT PCHAR  pucReceivedData,
    IN OUT PULONG pulReceivedDataBufLen );
```

Parameter	Description
ulHandleCard	handle to the card, provided from the PC/SC smart card resource manager after connecting to the card with SCardConnect
pucSendData	buffer for data sent to the reader/card, typically a command APDU
ulSendDataBufLen	length of the data to be sent
pucReceivedData	buffer for data received from reader/card, typically data and status
pulReceivedDataBufLen	before the call: length (in bytes) of the receive buffer after the call: number of bytes actually received

Command Syntax

CLA	INS	P1	P2	Lc	Input Data or Datagram***	Le
'8x'	'xx'	'xx'	'xx'	'xx'	'xx' ... 'xx' (Lc bytes)	'xx'

Response Syntax

Response Data or Datagram***	SW1	SW2
'xx' .. 'xx' (Le or max bytes)	'xx'	'xx'

Status Codes

SW1	SW2	Description
'90'	'00'	success
'64'	'00'	card execution error
'67'	'00'	wrong length
'68'	'00'	invalid class (CLA) byte
'69'	'82'	security status not satisfied. This can include wrong data structure, wrong keys, incorrect padding.
'6A'	'81'	invalid instruction (INS) byte
'6B'	'00'	wrong parameter P1 or P2

The error codes defined in the previous **Status Codes** table are valid for all the commands. Command specific error codes are documented with their respective command documentation.

Note: The error code **6982 security status not satisfied**, received during secured communication, blocks any further commands. Remove and reinsert the card to reactivate communication with the card.

6.3 ST LRI64 Support (PC/SC 2.0 add-on)

ST Microelectronics' LRI64 is a memory tag IC with 64-bit Unique ID (UID) and WORM user area. The following table lists PC/SC 2.01 compliant functions that are available for LRI64 based storage cards.

Get UID	implemented according to [PCSC 2.01]
Update Binary	
Read Binary	

This ISO15693 compliant IC is not accessible with standard driver settings. It requires the following registry key setting:

[HKEY_LOCAL_MACHINE\SYSTEM\CurrentControlSet\Control\CardMan\RFID]

"ControlFlags"=dword:00000010

See the [PCSC 2.01] and [LRI64] for documentation of PC/SC 2.0 compliant LRI64 card access. The following section describes usage of functions that are not already documented in [PCSC 2.01].

6.3.1 Update Binary

UpdateBinary requires block numbers within the WORM memory area (Write-Once Read-Many).

Examples:

Write '121314' to block '0D' (decimal 12):

Command APDU: 'FFD6000D03121314'

Response APDU: '9000'

Attempt to write '101112 to block '0A' (10 decimal):

Command APDU: 'FFD6000A03101112'

Response APDU: '6282'

For blocks 10 and 11 this works out fine, however, because we previously wrote to block 12, the card responds with '6282' **End of file reached before writing Lc bytes.** After the first write access to block 12 only read operations are supported.

The following APDU attempts to write to block 7:

Command APDU: 'FFD6000701FF'

Response APDU: '6581'

The card responds with '6581' **Memory failure (unsuccessful writing)** because this is a UID byte - write access to the UID area is always locked.

6.3.2 Read Binary

The ReadBinary command is available for all blocks of the LRI64 chip.

Examples:

Reading all 15 blocks from 0 to 14

Command APDU: 'FFB0000000'

Response APDE: 'xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx9000'

Attempt to read 16 blocks

Command APDU: 'FFB0000010'

Response APDE: 'xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx6282'

The response is '6282' or **End of file reached before reading expected number of bytes**. Even though the warning '6282' is returned, all bytes from block 0 up to block 14 are read correctly.

Read blocks 10 and 11 (2 bytes)

Command APDU: 'FFB0000A02'

Response APDE: 'xxxx9000'

Attempt to read an invalid block number:

Command APDU: 'FFB0000F01'

Response APDE: '6A82'

The response is the error code '6A82' because block number 15 does not exist.

6.4 ISO15693-3 Memory Card Support

For detailed information about supported ISO15693 Tags, reference Section 10 Reading ISO15693, page 58.

READ BINARY and **UPDATE BINARY** is compliant to PS/SC2.01. See *Section 4 PC/SC 2.0*.

7 Communication with MIFARE Plus

Depending on the card security level, the reader activates the MIFARE Plus card in the ISO 14443A Layer 3 or in the ISO 14443A Layer 4 (T=CL).

Security Level	Protocol Type
MIFARE Plus SL 0	ISO 14443 A - 4
MIFARE Plus SL 1	ISO 14443 A - 3
MIFARE Plus SL 2	ISO 14443 A - 3
MIFARE Plus SL 3	ISO 14443 A - 4

Note: The OMNIKEY synchronous API does not support the new MIFARE Plus cards (for example SL1 cards). Use the command set from PC/SC 2.01 part 3. The MIFARE functions from the sample application, `contactlessdemoVC` and `contactlessdemoVB` require the synchronous API. These applications do not work with MIFARE Plus cards.

7.1 ISO 14443 A - Part 4 card communication

If the card is activated in protocol layer 4, the application communicates with the MIFARE Plus card by calling `SCardTransmit`. The card command is transferred directly to the MIFARE Plus card by using the T=CL protocol layer. The T=CL protocol layer is completed by the driver. The application uses this type of communication for all card commands in SLO and SL3. For MIFARE Plus details, reference the MIFARE Plus data sheet from NXP (www.nxp.com).

The application executes the card provisioning in security level 0 or the AES authentication in security level 3 by direct transferring the MIFARE Plus commands.

7.2 ISO 14443 A - Part 3 card communication

If activating the card in protocol layer 3, the application does not use the direct card communication. For this type of communication, a transparent transmission channel to the card is necessary. There is an amendment proposal for the PC/SC specification part 3 (HID and NXP) in discussion with the PC/SC work group.

Because the standardization is not concluded, the OMNIKEY Contactless Smart Card reader provides an HID proprietary transparent channel. In this channel the application communicates with generic card commands. See *Sections 7.3 Open Generic Session, 7.4 Generic Card Commands and 7.5 Close Generic Session*.

7.3 Open Generic Session

Stop the driver activity for card tracking and initialize the generic command session. Take the card control to the application.

INIT GENERIC SESSION Command APDU

Command	Class	INS	P1	P2	Lc	Data In	Le
Init Session	0xFF	0xA0	0x00	0x07	0x03	0x01 0x00 0x01	-

INIT GENERIC SESSION Command Output

Data Out
SW1 SW2 = 0x9000

At first the application must send the following APDU with SCardTransmit.

Send FFA0000703010001

Receive 9000

7.4 Generic Card Commands

Write the MIFARE Plus command in a transparent channel to the card. The Application sends the Generic Card Command APDU with SCardTransmit.

GENERIC CARD COMMAND APDU

Command	Class	INS	P1	P2	Lc	Data In	Le
Card Command	0xFF	0xA0	0x00	0x05	6+n	01 00 F3 00 00 64 + MIFARE Plus command	00

Preamble	MIFARE Plus card command	Explanation
01 00 F3 00 00 64	E1 81	ISO14443-3 RATS
01 00 F3 00 00 64	0A 01 70 02 90 00	ISO14443-4 First Authentication

Never change the **red labelled** preamble.

The **green labeled** data field is the PCB and CID. The application is responsible for the correct usage of the Protocol Control Byte (PCB) 0000 1010. The green labeled bit 0 is the block number. See ISO 14443-4 clause 7.5.3 Block numbering rules.

GENERIC CARD COMMAND Output

Data Out					
RF Controller Status	MIFARE Plus card answer			SW1 SW2	
Byte1 Byte 2	Byte 3 ... n-2			Byte n-1 Byte n	
00 00	[PCB+CID]	SC	Data	0x9000	successful
	[0A 01]	90	[XX XX ... XX]	0x6400	no card answer (TimeOut)
08 04			0A	0x9000	successful ACK answer from MIFARE card
08 04			one-byte value from range: 00-09, 0B-0F	0x9000	successful NAK answer from MIFARE card

The **green labeled PCB, CID** field is only available if the card is switched to ISO14443-4. If desired, leave the data field empty. The status code in this sample is successful code.



7.4.1 MIFARE Plus commands with the GENERIC INTERFACE Command APDU Samples

Switching to ISO14443 part 4 (RATS) Sample

Send FFA00005080100F3000064E08100
 Receive 00000C757784024D46505F454E479000

First Authentication Sample

Send FFA000050C0100F30000640A017002900000
 Receive 00000A0190XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX9000

SL1 authentication Sample

Send FFA00005090100F300006476049000
 Receive 000090XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX9000

7.5 Close Generic Session

Continue the driver activity for card tracking and close the generic command session. Take the card control from the application to the driver.

CLOSE GENERIC SESSION Command APDU

Command	Class	INS	P1	P2	Lc	Data In	Le
Close Session	0xFF	0xA0	0x00	0x07	0x03	0x01 0x00 0x02	-

INIT GENERIC SESSION Command Output

Data Out
SW1 SW2 = 0x9000

After the generic interface session, close the session. Do not skip this step.

The application must send the following APDU with **SCardTransmit**.

Send FFA0000703010002
 Receive 9000

8 OMNIKEY Contactless Smart Card Reader Keys

The OMNIKEY Contactless Smart Card reader has a set of built-in cryptographic keys, some of which are implemented in volatile memory and others in non-volatile memory.

8.1 Key Numbering Scheme

Cryptographic keys are referenced by a unique key number between 0x00 and 0xFE. Each key number refers to a key of pre-defined length for a specific card type. For cards such as MIFARE and iCLASS, multiple key numbers are reserved.

The OMNIKEY key number is used to determine key usage, key length, and to map the reader key to the third party card key.

Examples:

Reader Key number '0A' refers to the 6 byte MIFARE key 10, K_{MIF10}

Reader Key number '24' refers to the 8 byte iCLASS Default key for application 1 on page 1

See MIFARE and iCLASS for detailed documentation. Contact your card manufacturer for information about any key values.

Keys Numbers and Key Names

Key #	Key Name	Key Length	Key Type	Memory Type
6-byte (MIFARE) keys				
'00' to '1F'	K_{MIF0} (MIFARE Key 0) to K_{MIF31} (MIFARE Key 31)	6 bytes	Card Key	Non- volatile memory
8-byte (iCLASS) keys				
'20'	K_{IAMC} (K_{MCO} , K_c for application 2 of page 0 on Book 0 of iCLASS card)	8 bytes	Card Key	Non- volatile memory
'21'	K_{MDC} HID Master Key (K_{MDO} , K_d for application 1 of page 0 on Book 0 of iCLASS card)	8 bytes	Card Key	Non- volatile memory
'22'	RFU (previously used for HID Master Key K_{MDO})	8 bytes	Card Key	Non-volatile memory
'23'	K_{MCO} (Default Master Key for application 2 of page 0 of iCLASS card)	8 bytes	Card Key	Non- volatile memory
'24'	K_{MD1} (Default Master Key for application 1 of page 1 of iCLASS card)	8 bytes	Card Key	Non- volatile memory
'25'	K_{MC1} (Default Master Key for application 2 of page 1 of iCLASS card)	8 bytes	Card Key	Non- volatile memory
'26'	K_{MD2} (Default Master Key for application 1 of page 2 of iCLASS card)	8 bytes	Card Key	Non- volatile memory
'27'	K_{MC2} (Default Master Key for application 2 of page 2 of iCLASS card)	8 bytes	Card Key	Non- volatile memory
'28'	K_{MD3} (Default Master Key for application 1 of page 3 of iCLASS card)	8 bytes	Card Key	Non- volatile memory
'29'	K_{MC3} (Default Master Key for application 2 of page 3 of iCLASS card)	8 bytes	Card Key	Non- volatile memory
'2A'	K_{MD4} (Default Master Key for application 1 of page 4 of iCLASS card)	8 bytes	Card Key	Non-volatile memory



Key #	Key Name	Key Length	Key Type	Memory Type
'2B'	K _{MC4} (Default Master Key for application 2) of page 4 of iCLASS card	8 bytes	Card Key	Non- volatile memory
'2C'	K _{MD5} (Default Master Key for application 1 of page 5 of iCLASS card)	8 bytes	Card Key	Non- volatile memory
'2D'	K _{MC5} (Default Master Key for application 2 of page 5 of iCLASS card)	8 bytes	Card Key	Non- volatile memory
'2E'	K _{MD6} (Default Master Key for application 1 of page 6 of iCLASS card)	8 bytes	Card Key	Non- volatile memory
'2F'	K _{MC6} (Default Master Key for application 2 of page 6 of iCLASS card)	8 bytes	Card Key	Non- volatile memory
'30'	K _{MD7} (Default Master Key for application 1 of page 7 of iCLASS card)	8 bytes	Card Key	Non-volatile memory
'31'	K _{MC7} (Default Master Key for application 2 of page 7 of iCLASS card)	8 bytes	Card Key	Non- volatile memory
'32'	K _{MTD} (Master Transport Key for application 1 of Picopass cards)	8 bytes	Card Key	Non volatile memory
'33'	K _{MTC} (Master Transport Key for application 2 of Picopass cards)	8 bytes	Card Key	Non- volatile memory
'34'	K _{MDOB1} (Default Master Key for application 1 of page 0 on Book 1 of iCLASS card)	8 bytes	Card Key	Non-volatile memory
'35'..'7F'	RFU			
16-byte keys				
'80'	K _{CUR} (Custom read key)	16 bytes	Reader Key	Non-volatile memory
'81'	K _{CUW} (Custom write Key)	16 bytes	Reader Key	Non- volatile memory
'82'	K _{ENC} (Card data encryption key)	16 bytes	Card Key	Non- volatile memory
24- byte keys				
'B0'..'CF'	RFU			
32-byte keys				
'D0'..'DF'	RFU			
0xF0 to 0xFF are volatile keys				
0xF0	K _{VAK} (volatile application key)	8 bytes	Card Key	Volatile memory
'F1'...'FF'	RFU			

Note: OMNIKEY Contactless Smart Card reader firmware version 5.00 is the first to support all keys listed above. Readers with firmware version 1.03 and 1.04 only support key numbers 0x20 and 0xF0.

Key number 0x21 to Key number 0x31 (except 0x22) are the default keys for iCLASS cards. Key number 0x32 and 0x33 are the default transport keys for Inside cards.

Keys 0x21 and 0x22 are stored in the reader. The remaining non-volatile keys 0x23 to 0x33 are stored in the registry.

Key 0x21 cannot be updated. Updates of key 0x22 are RFU and currently not supported.

8.2 Key Container and Slots

The OMNIKEY Contactless Smart Card reader key container is organized in fixed-length key slots. These key slots allow easy usage of cryptographic keys. It is not necessary that the host application knows anything about the physical storage location. Load keys into a key container by referring to a key slot and a key number. Key access and usage are managed by the reader firmware. For security purposes, keys can only be used and updated, but they can never be read. As an additional security measure, keys are diversified with two 16-byte secret keys before being committed to a key container.

Key slot properties are available for advanced users. This feature is designed to ensure proper use of a single key in case there are more keys than key slots.

Key Container of OMNIKEY Contactless Smart Card Reader

Key Slot (KS) Number	KS Length	Default Stored Key Name	Default Stored Key Number	Remarks
'00'	12	K _{MIF0}	'00'	No key slot information is available for these key slots. Retrieving information will return SW1SW2 6300.
....	12	-----	----	
'1F'	12	K _{MIF31}	'1F'	
'20'	16	K _{CUR}	'80'	Key slot information is available.
'21'	16	K _{CUW}	'81'	
'22'	16	K _{ENC}	'82'	
'23'	08	K _{IAMC}	'20'	
'24'	08	K _{MDO}	'22'	
'25'	08	K _{MDC}	'21'	
'26'	08	K _{VAK}	'F0'	No key slot information is available for these key slots. Retrieving information will return SW1SW2 6300.
'27'	08	K _{MCO}	'23'	Key slot information is available.
'28'	08	K _{MD1}	'24'	
'29'	08	K _{MC1}	'25'	
'2A'	08	K _{MD2}	'26'	
'2B'	08	K _{MC2}	'27'	
'2C'	08	K _{MD3}	'28'	
'2D'	08	K _{MC3}	'29'	
'2E'	08	K _{MD4}	'2A'	
'2F'	08	K _{MC4}	'2B'	
'30'	08	K _{MD5}	'2C'	
'31'	08	K _{MC5}	'2D'	
'32'	08	K _{MD6}	'2E'	
'33'	08	K _{MC6}	'2F'	
'34'	08	K _{MD7}	'30'	
'35'	08	K _{MC7}	'31'	
'36'	08	K _{MTD}	'32'	
'37'	08	K _{MTC}	'33'	
'38'	08	K _{MDOB1}	'34'	

8.3 Key Update Rules

The following table lists update rules for keys being used by the reader system. Key updates relate to keys residing in the OMNIKEY reader. Those keys are used for authentication of the reader to the card or to encrypt data written to the card.

Key Name	Key Number	Key Update Rule	Description
K_{MIF0} to K_{MIF31}	'00' to '1F'	Always	6-byte MIFARE keys can be loaded/updated by using the <i>SCardCLWriteMIFAREKeyToReader</i> function of synchronous API. A key sent to reader may be plain or 3-DES encrypted with the K_{CUR} or K_{CUW} . For more details (for example, padding for 3-DES encryption) see the synchronous API help file <i>cmsync.hlp</i> .
K_{IAMC}	'20'	Standard Mode: - Always Secured Mode: - Read session - Write session	8-byte iCLASS key. This key is the transport key K_{c0} (authenticates to application 2 on page 0).
K_{MDC}	'21'	Never	Authenticates the reader to the HID application of an iCLASS card for read access. This authentication requires secure mode operation. Write access to the HID application is not allowed.
K_{MDO}	'22'	Never	RFU
K_{CUR}	'80'	Secured mode: - read session	Authenticates the reader to establish a secured session. Grants the application read access. This key can also be used to encrypt the MIFARE key in <i>SCardCLWriteMIFAREKeyToReader</i> function.
K_{CUW}	'81'	Secured mode: - read session - write session	Authenticates the reader to establish a secured session. Grants the application read-only access. This key can also be used to encrypt the MIFARE key in <i>SCardCLWriteMIFAREKeyToReader</i> function.
K_{ENC}	'82'	Secured mode: - read session - write session	Encrypts data written to the card or decrypts data read from the card. Requires read/update INS bits to be set accordingly. If INS bits are set for DES, the first 8 bytes of K_{ENC} are used. For 3-DES operations, all 16 bytes are used.
K_{VAK}	'FO'	Standard Mode: - Always Secured Mode: - Read session - Write session	Authenticates any application on the iCLASS card. The sequence is as follows: Load K_{VAK} with the 8-byte value, Authenticate with K_{VAK} Load K_{VAK} with new 8-byte value, Authenticate with K_{VAK} .
K_{MCO} to K_{MC7} K_{MD1} to K_{MD7} , and K_{MDOB1}	'23' to '31' and '34'	Never	iCLASS default keys for free memory zones. May be used to authenticate to any non-HID application on an iCLASS card. This allows quick evaluation of iCLASS cards without knowledge of the default keys.
$K_{MTD} - K_{MTC}$	'32' '33'	Never	Picopass transport keys set by the card manufacturer.

9 Standard Communication with iCLASS Card

Standard communication means there is no authentication of the host application (for example Microsoft Windows) to the OMNIKEY 5x21-CL. Unless the card itself has built-in mechanisms for confidential communication, the channel between host and reader is unprotected, exposing the connecting USB cable to eavesdropping.

9.1 APDU Structure for Standard Communication

iCLASS cards are supported through ISO7816 compliant APDU exchange. Command and response APDUs are exchanged through the OMNIKEY proprietary API function SCardCLICCTransmit residing in the OMNIKEY synchronous API.

Command APDU (through pucSendData)

CLA	INS	P1	P2	Lc	Data in	Le
'80'	'xx'	'xx'	'xx'	'xx'	'xx' ... 'xx'	'xx'

Response APDU (through pucReceivedData)

Data out	SW2	SW1
'xx' ... 'xx'	'xx'	'xx'

9.2 Commands Available in Standard Communication Mode

Card commands are referred to by their respective instruction (INS) byte as part of a command APDU sent by SCardCLICCTransmit. The following table lists all INS values supported by the OMNIKEY Contactless Smart Card reader in standard communication mode.

List of Supported INS bytes (APDU Command Set)

Instruction (INS)	Description	Command Type
'82'	Load Key	reader command
'C4'	GetKeySlotInfo	reader command
'A6'	Select Page	card command
'88'	Authenticate	card command
'B0'	Read	card command
'D6'	Update	card command

9.2.1 Select Page (Card Command)

iCLASS comes with various card configurations. Every iCLASS card has at least one page (page 0). Cards such as the iCLASS 2x8KS, provide additional pages 1 to 7. In addition to pages, iCLASS cards also have books. To select a certain memory block on an iCLASS card, you need to know its book number, page number, and block number.

Select the appropriate page and book before authentication to an iCLASS card application for performing read/write access. In the context of iCLASS cards, an application area and memory area are synonymous.

Currently, only cards with more than 16 kbit of total memory capacity have an additional book. The following section describes parameters of the **Select Page** command.

Command Syntax

CLA	'80'
INS	'A6'
P1	'00': Select the only page of iCLASS 2KS or single page of 16KS '01': Select page of multi-page iCLASS 16KS (8x2KS) or 32KS
P2	Specifies whether data is requested from the card '00': no data requested '04': request for 8-byte card serial number '08': request for 8-byte configuration block data '0C': request for 8-byte application issuer data
LC	for P1='00': standard mode: empty; secured mode: '00' for P1='01': '01'
Data Field	for P1='00': empty for P1='01': book number and page number according to format below
Le	for P2='00': empty for P2>'00': '00' or '08'

Data Field Format for Page Number & Book Selection

b7	b6	b5	b4	b3	b2	b1	b0
0	0	0	Book number 0: for 1 st book 1: for 2 nd book on iCLASS 32KS	0	Page number 0-7		

Page Selection Examples

Data Field	Description
'03'	select page 3 of an iCLASS 8x2KS card
'03'	select page 3 of book 0 of an iCLASS 32KS (book 0: 8x2KS) card
'13'	select page 3 of book 1 of an iCLASS 32KS (book 1: 8x2KS) card
'10'	select book 1 (16KS) of an iCLASS 32KS
'00'	select book 0 (16KS) of an iCLASS 32KS

Response Syntax

Data Field	empty or 8 byte card response, in case of a previous request for such data	
SW1	SW2	status word as described below
'90'	'00'	Success
'62'	'83'	requested page number does not exist
'6C'	'xx'	wrong length Le. xx returns the number of data available

Reference section 5.2.1-Card Access through SCardCLICCTransmit for additional status words common to all iCLASS access functions.

Note: If the application resides on page 0 of an 8x2KS iCLASS card or on the single page of an iCLASS 16KS or iCLASS 2KS card, the **Select Page** command is not necessary. It is helpful to call **Select Page** anyway, in case you need to retrieve the card serial number, configuration block, or application issuer data.

9.2.2 Load Key

Load Key command loads an iCLASS card key and stores it in reader memory, thus preparing the reader for subsequent card authentication commands. OMNIKEY Contactless Smart Card reader can only store one such key at a time.

Command Syntax

CLA	'80': standard mode operation '84': secured mode operation
INS	'82'
P1	'xx' specifies key location according to byte format below
P2	'xx' key number (see Key Numbering Scheme)
LC	'08'
Data Field	8 byte key
Le	Empty

P1 - Format for Key Location

b7	b6	b5	b4	b3	b2	b1	b0	Description
x								0: card key 1: reader key
	x							0: plain transmission 1: secured transmission (not available)
		x						0: key loaded in volatile memory 1: key loaded in non-volatile memory.
			x					0: RFU (non-zero value returns error)
				0	0	0	0	b0..b3 must be set to 0

Note: Only load a key in volatile memory once during any given card session. Unless you need to authenticate to any additional application with a different key, you can use the stored key throughout the session for more than one authentication.

Response Syntax

Data Field		Empty
SW1	SW2	status word as described below
'90'	'00'	success
'63'	'00'	no further information given (warning)
'63'	'81'	loading/updating is not allowed
'63'	'82'	card key not supported
'63'	'83'	reader key not supported
'63'	'84'	plaintext transmission not supported
'63'	'85'	secured transmission not supported
'63'	'86'	volatile memory is not available
'63'	'87'	non-volatile memory is not available
'63'	'88'	key number not valid
'63'	'89'	key length is not correct

Reference section 5.2.1-Card Access through SCardCLICCTransmit for additional status words common to all iCLASS access functions.

9.2.3 GetKeySlotInfo (Reader Command)

The GetKeySlotInfo reader command provides access to key slot status information.

OMNIKEY Contactless Smart Card reader provides a set of predefined key slots in the key container. Easily load key slots with keys by referring to the key number (for example, key reference) rather than loading the actual 8 byte key by value. The slot for key storage is automatically determined by the reader system.

Command Syntax

CLA	'80': standard mode operation '84': secured mode operation
INS	'C4'
P1	'00'
P2	'xx' key slot number. See <i>Section 8.2 Key Container and Slots</i> .
LC	standard mode: empty; secured mode: '00'
Data Field	8 byte key
Le	'00' or '02'

Response Syntax

Data Field	2 byte key information see Key Information and Key Access Option below	
SW1	SW2	status word as described below
'90'	'00'	success
'63'	'00'	no further information given (warning)
'63'	'01'	key slot does not contain valid key or empty key slot
'62'	'83'	requested key slot does not exist
'6C'	'xx'	more data available than requested; xx returns available data size

Reference section 5.2.1-Card Access through SCardCLICCTransmit for additional status words common to all iCLASS access functions.

Key Information (contained in Data Field)

b15	b14	B13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
RFU							Key Access Option	key number according to 7.1-Key Numbering Scheme 'FF' means empty key slot							

Key Access Option (contained in b9, b8 of Data Field)

b9	B8	Key Access Option
0	0	key can be loaded for any plaintext and secured transmission.
0	1	key can only be loaded in OMNIKEY proprietary secured mode
1	0	key can never be loaded
1	1	RFU

9.2.4 Authenticate (Card Command)

The **Authenticate** command authenticates the reader system to the card application of the selected page. For iCLASS authentication, this command requires previous page selection.

Command Syntax

CLA	'80': standard mode operation '84': secured mode operation
INS	'88'
P1	'xx' key type: '00': Inside Contactless or iCLASS debit key Kd (i.e. application 1) '01': Inside Contactless or iCLASS credit key Kc (i.e. application 2) '60': MIFARE Key A '61': MIFARE Key B 'FF': key type unknown or not necessary all other values: RFU
P2	'xx' key number. <i>See Section 8.1 Key Numbering Scheme.</i>
LC	length of address iCLASS: standard mode: empty; secured mode: '00' other cards: '01' or '02' (max 2 address bytes supported)
Data Field	iCLASS: empty other cards: one or two byte address
Le	empty

Response Syntax

Data Field		empty
SW1	SW2	status word as described below
'90'	'00'	success
'63'	'00'	no further information given (warning)
'69'	'83'	authentication cannot be done
'69'	'84'	reference key not useable
'69'	'88'	key number not valid

Reference section 5.2.1-Card Access through SCardCLICCTransmit for additional status words common to all iCLASS access functions.

9.2.5 Read (Card Command)

The **Read** command reads a data block from the given block address. For the iCLASS card, only eight bytes can be read at a time. For information about available blocks reference [HID_ICLASS]. This command requires previous page selection and, depending on the iCLASS card configuration, authentication to the iCLASS application.

Command Syntax

CLA	'80': standard mode operation '84': secured mode operation
INS	'B0'
P1	MSB of block number
P2	LSB of block number
LC	standard mode: empty; secured mode: '00'
Data Field	empty
Le	'00' or '08' '20': if supported by card, up to 32 bytes can be returned

Response Syntax

Data Field	8 byte block returned from the card (iCLASS) 32 bytes returned if card supports it	
SW1	SW2	status word as described below
'90'	'00'	success
'62'	'81'	part of returned data may be corrupted
'62'	'82'	end of file reached before reading all requested bytes
'69'	'81'	command incompatible
'69'	'86'	command not allowed
'6A'	'81'	function not supported
'6A'	'82'	file not found or addressed block or byte does not exist
'6C'	'xx'	more data available than requested; xx returns available data size, typically '08'

Reference section 5.2.1-Card Access through SCardCLICCTransmit for additional status words common to all iCLASS access functions.

Note: Reading blocks without valid authentication or trying to read data without read permission, will set all returned data to 'FF'.

9.2.6 Update (Card Command)

The Update command writes a data block to a given block address. For the iCLASS card, only eight bytes can be written at a time. For further information about available blocks reference [HID_ICLASS]. This command requires previous page selection and, depending on the iCLASS card configuration, authentication to the iCLASS application.

Command Syntax

CLA	'80': standard mode operation '84': secured mode operation
INS	'D6'
P1	MSB of block number
P2	LSB of block number
LC	'08' (iCLASS only allows 8 bytes per call)
Data Field	8 bytes to be written to card
Le	empty


Response Syntax

Data Field	empty	
SW1	SW2	status word as described below
'90'	'00'	success
'62'	'82'	end of file reached before writing all Lc bytes
'65'	'81'	memory failure (unsuccessful writing)
'69'	'81'	command incompatible
'69'	'86'	command not allowed
'6A'	'81'	function not supported
'6A'	'82'	file not found or addressed block or byte does not exist

Reference section 5.2.1-Card Access through SCardCLICCTransmit for additional status words common to all iCLASS access functions.

Note: Updating without authenticating to the corresponding application returns '6400' **Card Execution Error**.

9.3 Communication in Standard Mode

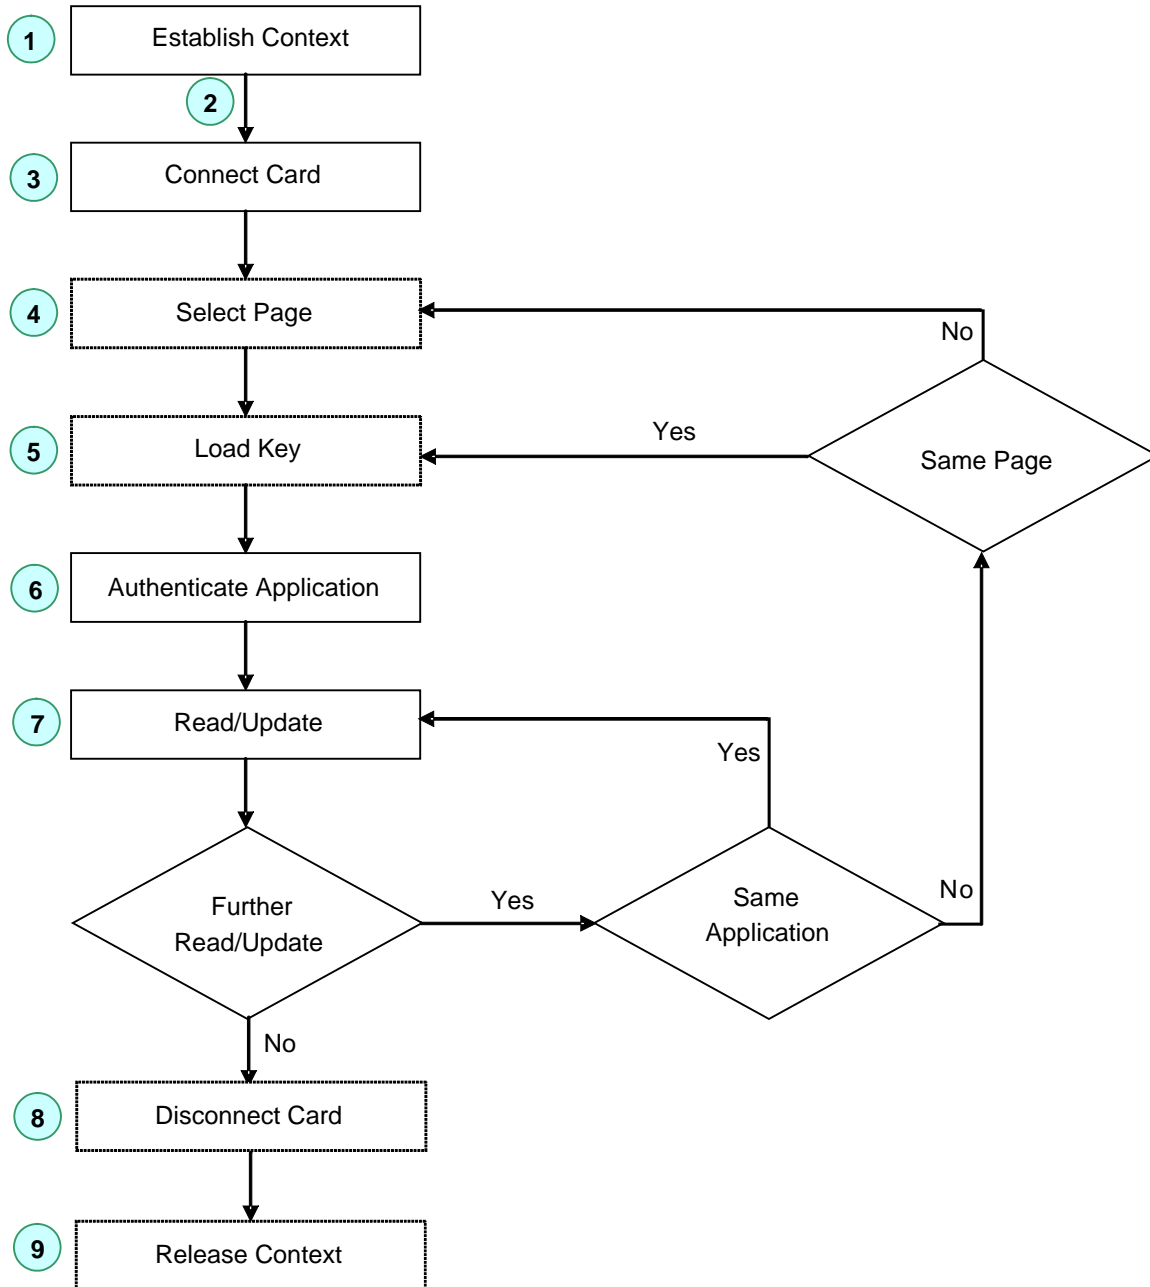

10 Secured Communication with the iCLASS Card

For a desktop smart card reader, such as the OMNIKEY Contactless Smart Card reader, security mainly evolves from the following scenarios:

- Authenticity between the host application and the reader
- Confidentiality of data transmitted through USB cable
- Integrity of transmitted data
- Authenticity between the reader and the card
- Confidentiality and integrity of the RF transmission
- Confidentiality of data stored in cards

OMNIKEY Contactless Smart Card reader provides an end-to-end security scheme to fulfill the security requirements listed above.

Note: Secured mode communication requires reader firmware version 5.00 or greater.

10.1 Multi-Step Approach to a Secure Card Reader System

10.1.1 Authenticity between Host and Reader

Authenticity between host and reader is enforced with a mutual authentication scheme that requires a 16-byte transport key (K_{cur} or K_{cuw}) and a proprietary algorithm. Only initiate sessions upon successful completion of this one-step mutual authentication process.

Note: This feature prevents unauthorized reader usage. Additional information about this process is available under NDA.

10.1.2 Confidentiality of USB Data Exchange

The Contactless Smart Card reader has a built-in mechanism that protects against eavesdropping and replay attacks on USB traffic. The data transmitted through a USB cable is triple DES encrypted with the Session Key (K_s). This key is generated during the mutual authentication process. It is unique for every session. Therefore, traffic recorded in one session cannot be replayed in another session.

10.1.3 Integrity of Transmitted Data

Data transmitted between host and reader is digitally signed with an eight-byte Message Authentication Code (MAC) which is appended to the data. This is done to detect any inconsistencies that may occur due to erroneous or modified data.

10.1.4 Authenticity between Reader and Card

iCLASS cards allow authentication of the reader system to the card. This is done by proving knowledge of a shared secret, the iCLASS card application key K_{IAMC} or K_{MDC} . Applications that are protected with such a key require successful reader authentication before read/write access to card data is granted.

10.1.5 Integrity of the Radio Frequency (RF) Transmission

Data integrity of an RF transmission with an iCLASS card is enforced with a two-byte checksum (based on CRC algorithm).

10.1.6 Confidentiality of the RF Transmission

The Contactless Smart Card reader supports an important feature to guarantee confidentiality: it encrypts data before writing data to the card and decrypts data read from the card. Confidentiality in this context means that data is securely transmitted between the card and the reader without an eavesdropper reading the data in plaintext.

10.1.7 Authentication of the Host for Read/Write Session

The Contactless Smart Card reader contains two keys K_{CUR} and K_{CUW} that are used to control access to read and write functions respectively. Initiating a reader session with K_{CUR} makes it a read-only session thus blocking functions that write to the card. Starting a session with K_{CUW} enables the reader for both read and write access.

Note: This is part of a host-to-reader authentication mechanism, not to be confused with reader-to-card authentication enforced by the card itself.

10.1.8 Protection against Known Attacks

Replay Attacks:

The data header contains a datagram that is different with every APDU exchange. The reader ensures that no frame is repeated.

Plain Text Attack:

For some critical commands, there is a built-in delay to prevent a plain text attack. If there is any error in the data header or signature, the session is immediately terminated. One can commence communication only after starting a new session.



10.2 APDU Structure for Secured Communication

The Contactless Smart Card reader provides a unique mechanism to secure the communication channel using OMNIKEY's proprietary cryptographic envelope which protects the transmitted data from eavesdroppers.

Secured communication requires additional steps to prepare data before sending it to the reader system and after receiving data from the reader. The underlying triple DES algorithm requires a block size that is a multiple of 8. Therefore, the datagram has a built-in padding scheme. Authenticity of the plaintext is enforced with an 8 byte signature.

Command Syntax

CLA	INS	P1	P2	Lc	Input Datagram (<i>sent to the reader</i>)	Le
'84'	'xx'	'xx'	'xx'	'xx'	'xx ... xx'	'xx'

Input Datagram (*sent to the reader*)

	Data Header (DH)	Size of INS related data Lc _{INS}	INS related data (INSData)	Padding Bytes (PB)	Signature
3-DES{K _s , ('xxxxxxxx'	'xx'	'xx ... xx'	'80 ... 00'	'xx ... xx'
	4 bytes	1 byte	Lc _{INS} bytes	P bytes	8 bytes

P = number of padding bytes to satisfy (4+1+ Lc_{INS}+P) is multiple of 8.

Response Syntax

Output Datagram (<i>received from the reader</i>)	SW2	SW1
'xx ... xx'	'xx'	'xx'

Output Datagram (*received from the reader*)

	Data Header (DH)	Size of Card Response LcR	Card Response	Padding Bytes (PB)	Signature
3-DES{K _s , ('xxxxxxxx'	'xx'	'xx ... xx'	'80 ... 00'	'xx ... xx'
	4 bytes	1 byte	n bytes	P bytes	8 bytes

P = number of padding bytes to satisfy (4+1+ Lc_{INS}+P) is multiple of 8.

Note: If no valid session key K_s is available due to a previous error during the **Start Session** command, all datagram bytes are set to '00'. Therefore the host would receive '00 ... 00' || SW1 || SW2 as response from the reader.

10.2.1 Data Header (DH)

Data Header

Byte 0	Byte 1	Byte 2	Byte 3
Host data header (HDH)		Reader data header (RDH)	

When the host system sends a Host Data Header (HDH) to the reader, the reader must acknowledge the HDH in its response by returning the 1's complement of the original HDH. This allows the host to check whether it receives data originating from the correct data header.

When the reader sends a Reader Data Header (RDH) to the host, the host must acknowledge the RDH in its next request by sending the 1's complement of the preceding RDH. This allows the reader to check whether the data sent by the host follows a previous reader response.

10.2.2 Signature Generation

The OMNIKEY Contactless Smart Card reader signature generation is based on an 8-byte Message Authentication Code (MAC). The MAC value is calculated by taking the last 8 bytes of a DES CBC encrypted data block consisting of DH, LcINSDData, INSDData, and padding bytes. Kcur or Kcuw are used as signing keys.

The following steps describe how padding is applied to create a data block that can be signed using a DES CBC operation:

- Append '80' to the right of the data block.
- If the resulting data block length is a multiple of eight, no further padding is required.
- Do zero ('00') padding until the data block size reaches a multiple of eight.


10.2.3 Session Key Generation

The session key Ks is derived from an 8-byte random number and the MAC transmitted to the reader during Start Session. For the Start Session command, LcINSDData equals 8 (length of the random number) and INSDData contains the 8-byte random number.

All secured communication calls following a successful session key negotiation are 3DES encrypted with Ks.



10.2.4 Proprietary Host and Reader Datagram Example

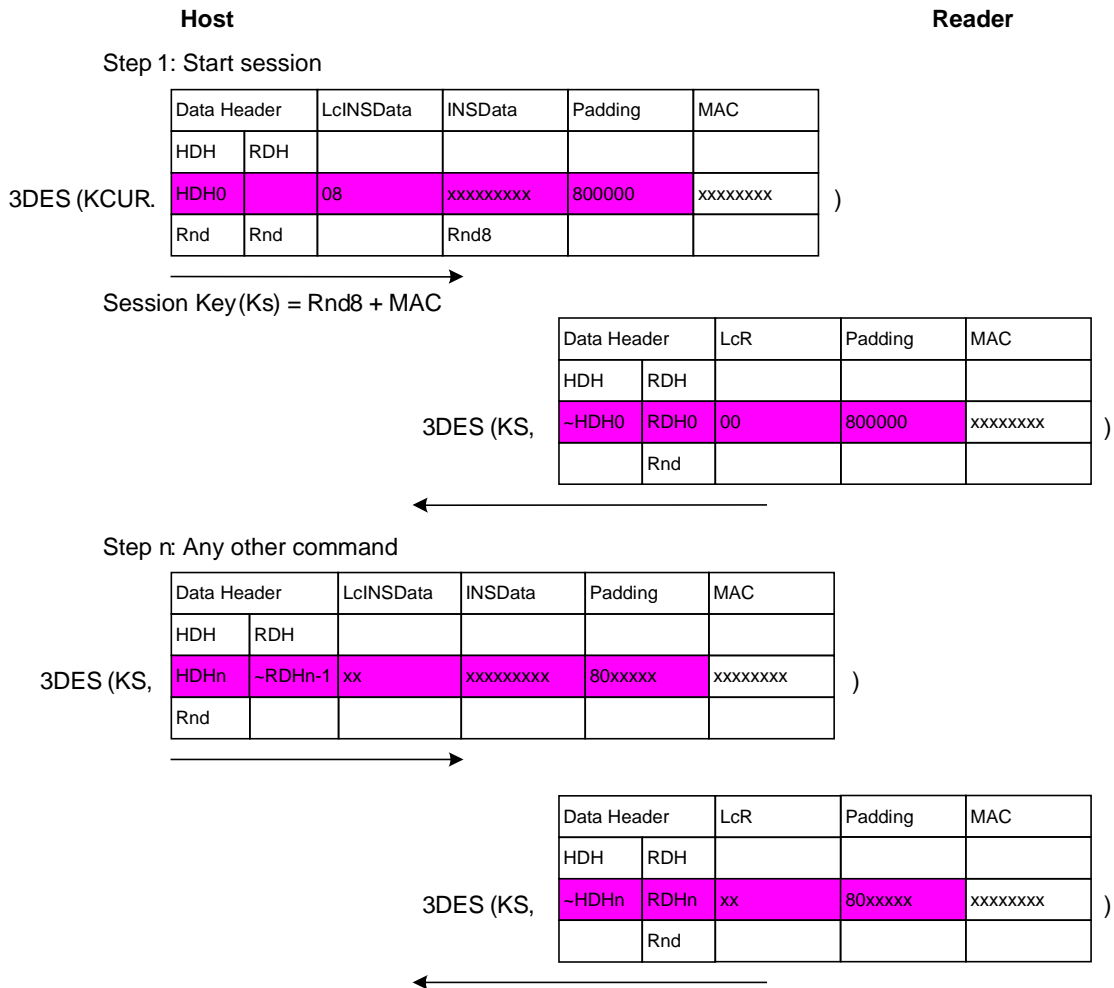

Note: This is a read-only session because K_{CUR} was used in the start session command. If K_{CUW} were used to start the session, both read and write operations would be allowed. The HID application is always read-only.

10.3 Instructions (INS) for Secured Communication

Card commands are referred to by their respective instruction (INS) byte as part of a command APDU sent by SCardCLICCTransmit. OMNIKEY Contactless Smart Card reader with firmware version 5.00 or greater supports the following secured mode instructions:

List of INS bytes for Secured Communication

Instruction (INS)	Description	Command Type
'C4'	GetKeySlotInfo	reader command
'72'	Manage Session	reader command
'82'	Load Key	reader command
'A6'	Select Page	card command
'88'	Authenticate	card command
'B0'	Read	card command
'D6'	Update	card command
'24'	Update Card Key	card command

In the following sections the command structure is described. LcINS and INSDData are part of the OMNIKEY proprietary structure.

Notes:

Secured mode and Standard Mode use different formatting of P1, bit 7 and bit 6 of the Read/Update commands (INS 0xB0 and 0xD6 respectively). Use the two LSBits of P1 to control the encryption of data read or updated.

Lc must always be transmitted in secured mode.

10.3.1 Manage Session (Reader Command)

The Manage Session command is used to start or end a session.

Command Syntax

CLA	'84'	
INS	'72'	
P1	'00': start session '01': end session other values: RFU	
P2	P1 = '00' (start session)	P1 = '01' (end session)
	'00': start read only session '01': start read/write session	'00'
Lc	'08': challenge size	'00'
Data Field	8-byte random number (challenge)	empty
Le	empty	

Response Syntax

Data Field	empty	
SW1	SW2	status word as described below
'90'	'00'	success

Reference section 5.2.1-Card Access through SCardCLICCTransmit for additional status words common to all iCLASS access functions.

Note: A session is automatically ended if the card is removed.

10.3.2 Select Page (Card Command)

Except for the CLA byte '84', the syntax for Select Page in secured mode is identical to the command described in 8.2.1-Select Page (Card Command).

10.3.3 Load Key (Reader Command)

Except for the CLA byte '84', the syntax for Load Key in secured mode is identical to the Load Command described in 8.2.2-Load Key.

10.3.4 Authenticate (Card Command)

Except for the CLA byte '84', the syntax for Authenticate in secured mode is identical to the command described in 8.2.4-Authenticate (Card Command).

10.3.5 Read (Card Command)

Except for the CLA byte '84', and the additional formatting rules for P1 described below, the syntax for the Read command in secured mode is identical to the command described in 8.2.5-Read (Card Command).

P1 Formatting for Secured Mode

b7	b6	b5 - b0	Description
0	0	Block Nr. MSB	Plain
0	1		DES Encryption
1	0		Triple DES Encryption
1	1		RFU

Data needs to be decrypted with the K_{ENC} to get the plaintext data.

10.3.6 Update (Card Command)

Except for the CLA byte '84', and additional formatting of P1 described below, the syntax for the Update command in secured mode is identical with the command described in 8.2.6-Update (Card Command).

P1 Formatting for Secured Mode

b7	b6	b5 - b0	Description
0	0	Block Nr. MSB	Plain
0	1		DES Encryption
1	0		Triple DES Encryption
1	1		RFU

Data is encrypted with K_{ENC} before storing it on the card.

10.3.7 GetKeySlotInfo (Reader Command)

Except for the CLA byte '84', the syntax for 7.3.7 GetKeySlotInfo in secured mode is identical to the command described in 8.2.3-GetKeySlotInfo (Reader Command).

10.3.8 Update Card Key

The Update Card Key command is used to change KC or KD.

Command Syntax

CLA	'84'
INS	'24'
P1	'00': New key for KD (application 1) '01': New key for KC (application 2) other values: RFU
P2	Key number where new key is stored.
Lc	'00': empty
Data Field	empty
Le	empty

Response Syntax

Data Field		empty
SW1	SW2	status word as described below
'90'	'00'	Success
'65'	'81'	Memory failure (unsuccessful writing)
'69'	'81' '86'	Command incompatible Command not allowed
'6A'	'81'	Function not supported

Reference section 5.2.1-Card Access through SCardCLICCTransmit for additional status words common to all iCLASS access functions.


The sequences for using UpdateCardKey command are as follows:

3. 1. If the desired change of the key is not in page 0, the page has to be selected by a **Select Page** command.
4. 2. Load transport/old key by **Load Key** command.
5. 3. Authenticate the card with the old key (key number as used for **Load Key** in step 2).
6. 4. Load new key by **Load Key** command.
7. 5. Now send the **UpdateCardKey** command with specific P2 (New Key number as loaded in step 4).

Note: Only update KD (application 1) after authentication with KD, and only update KC (application 2) after authentication with KC.

CAUTION: Do not write directly to address 3, 4 where KC and KD are stored, this will destroy the keys.

10.4 Communication at Secured Mode

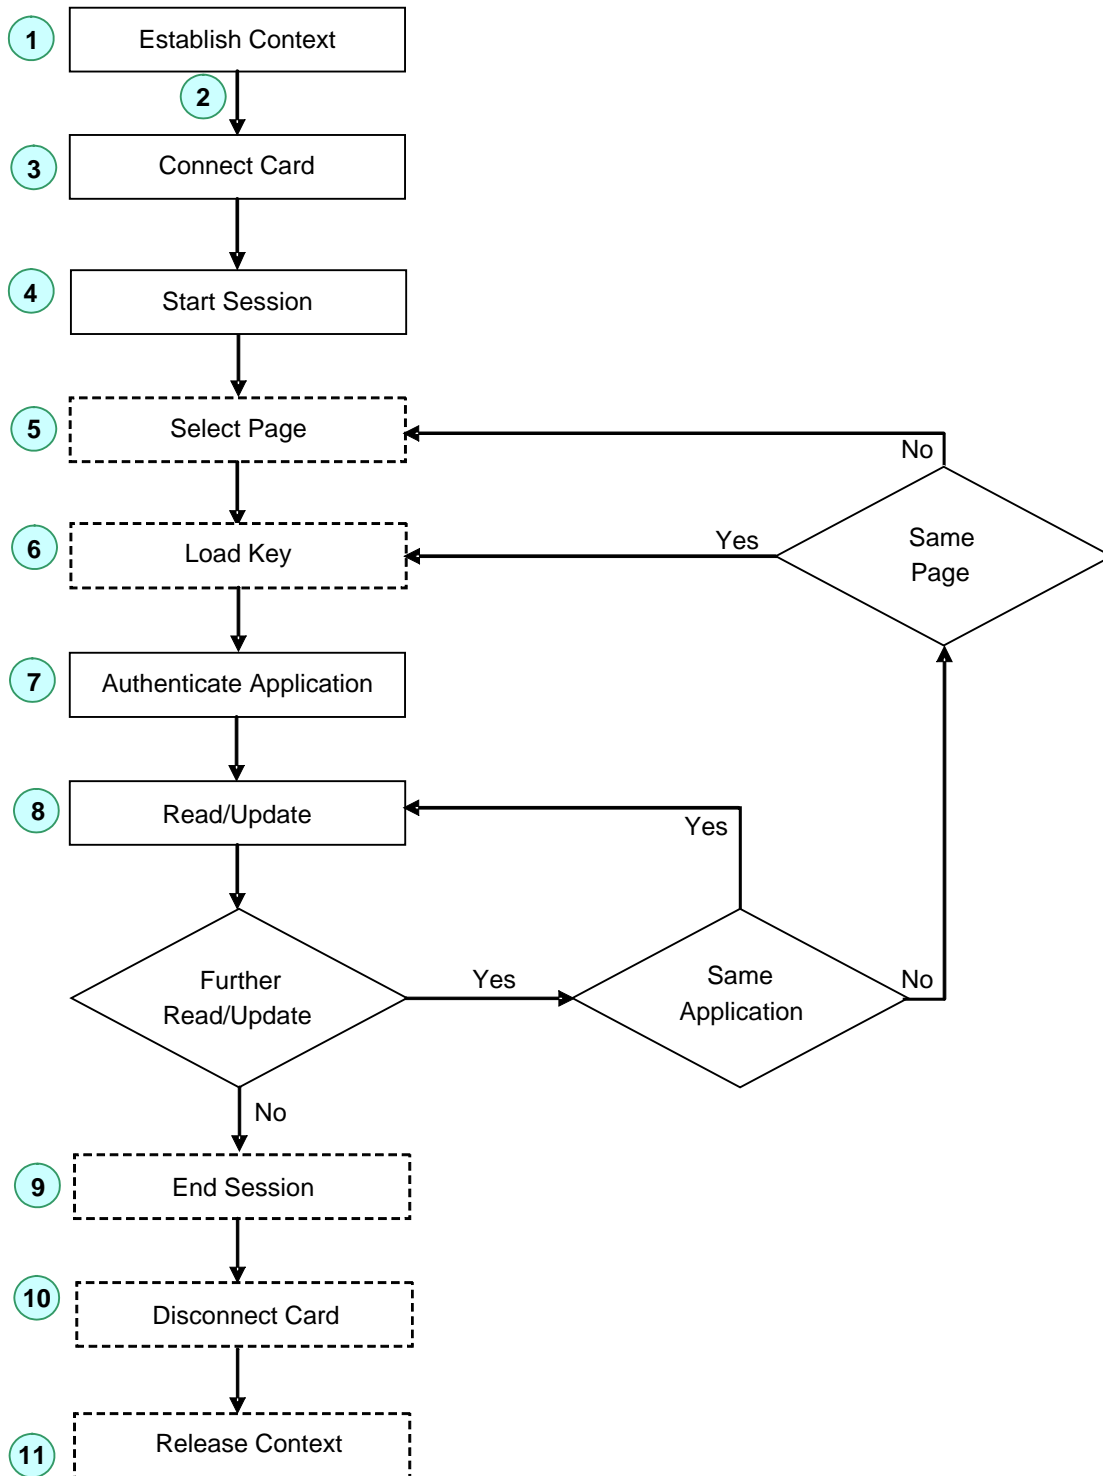

10.5 Session at Secured Mode APDUs Example

K_{CUR} = 'A0A1A2A3A4A5A6A7A8A9AAABACADAEAF', Read-only session

Host Reader

1. Start Session

CLA	INS	P1	P2	Lc	OMNIKEY Proprietary Input Datagram (sent to reader) CLEAR					
'84'	'72'	'00'	'00'	'18'	'1422'	'9D2B'	'08'	'4A895F20C 2D30B5E'	'800000'	'9E5052819C5A8D3C ,
					HDH (Rnd)	RDH (Rnd)	LcINS	Rnd8 (INSDData)	Padding	Signature
					DH					MAC
					'FD274CE840FA9AD139E4FC2923653A88743CB5986DB4F7A0'					
					OMNIKEY Proprietary Input datagram (sent to reader) ENCIPHERED					

Signature = DESEn {(A0A1A2A3A4A5A6A7),(14229D2B084A895F20C2D30B5E800000)}

= 8A8D430D608714FE9E5052819C5A8D3C

9E5052819C5A8D3C (last eight bytes of DES encryption)

Enciphered datagram = 3-DESEn{

(A0A1A2A3A4A5A6A7A8A9AAABACADAEAF),
(14229D2B084A895F20C2D30B5E8000009E5052819C5A8D3C) }

= FD274CE840FA9AD139E4FC2923653A88743CB5986DB4F7A0 (24 byte input datagram)

SessionKey (K_S) = Rnd8 + MAC = 4A895F20C2D30B5E9E5052819C5A8D3C

OMNIKEY Proprietary Output Datagram (received from reader)					SW1SW2
A04B84A4DE515FD8A9D40DFFE703FBF1					9000
'EBDD'	E00C	00	800000	E367401E2DA8FACB	
-HDH	RDH(Rnd)	LcR	Padding	Signature	
DH				MAC	

3-

DESDec{(4A895F20C2D30B5E9E5052819C5A8D3C),(A04B84A4DE515FD8A9D40DFFE703FBF1) }

= EBDDE00C00800000E367401E2DA8FACB

Signature = DESEn{(4A895F20C2D30B5E),(EBDDE00C00800000) }

= E367401E2DA8FACB

Note: A public source library to accomplish all security protocols introduced in the secured communication mode is available from OMNIKEY upon request.



2. Authenticate HID Application

CLA	INS	P1	P2	Lc	OMNIKEY Proprietary Send Datagram				
84	88	00	21	10	B3F1	1FF3	00	800000	B50318C9E871191A
					HDH (Rnd)	-RDH	LcINS	Padding	Signature
					DH				MAC
					B5FD83E756CA03DE54FBEA5546E8867D				
					Proprietary Data				

Signature = DESEn{(4A895F20C2D30B5E),(B3F11FF300800000)}
 = B50318C9E871191A

Proprietary Data = 3-DESEn{(4A895F20C2D30B5E9E5052819C5A8D3C),(
 B3F11FF300800000B50318C9E871191A) }
 = B5FD83E756CA03DE54FBEA5546E8867D

OMNIKEY Proprietary Response Datagram					SW1SW2
78A10C4FCC7EBC2C516354A56C4C7818					9000
4C0E	7D55	00	800000	D2D0B0B4E34EBDBE	
-HDH	RDH(Rnd)	LcR	Padding	Signature	
DH				MAC	

3-DESDec{(4A895F20C2D30B5E9E5052819C5A8D3C),
 (78A10C4FCC7EBC2C516354A56C4C7818) }
 = 4C0E7D5500800000D2D0B0B4E34EBDBE

Signature = DESEn{(4A895F20C2D30B5E),(4C0E7D5500800000) }
 = D2D0B0B4E34EBDBE

Note: A public source library to accomplish all security protocols introduced in the secured communication mode is available from OMNIKEY upon request.

3. Read Block 6

CLA	INS	P1	P2	Lc	OMNIKEY Proprietary Send Datagram					Le
84	B0	00	06	10	6762	82AA	00	800000	F63AB82BED09B039	08
					HDH (Rnd)	-RDH	LcINS	Padding	Signature	
					DH				MAC	
					2FABB8F0533E742383F4FE9045142859					
					Proprietary Data					

Signature = DESEn{(4A895F20C2D30B5E),(676282AA00800000)}
 = F63AB82BED09B039

Proprietary Data = 3-DESEn{(4A895F20C2D30B5E9E5052819C5A8D3C),
 (676282AA00800000F63AB82BED09B039) }
 = 2FABB8F0533E742383F4FE9045142859

OMNIKEY Proprietary Response Datagram						SW1	SW2
AA401E3D849B881044FF4D847977D9070C589338C097F163						9000	
989D	2A94	08	000000000000E414	800000	3101DDB971C922FF		
-HDH	RDH(Rnd)	LcR	Response Data	Padding	Signature		
DH					MAC		

3-DESDec { (4A895F20C2D30B5E9E5052819C5A8D3C),
 (AA401E3D849B881044FF4D847977D9070C589338C097F163)}
 = 989D2A9408000000000000E4148000003101DDB971C922FF

Signature = DESEn{(4A895F20C2D30B5E),(
 989D2A9408000000000000E414800000) }
 = 1CDF21DCA31BABDB3101DDB971C922FF
 = 3101DDB971C922FF (last 8-byte block)

Note: A public source library to accomplish all security protocols introduced in the secured communication mode is available from OMNIKEY upon request.

11 Reading ISO15693

11.1 Products

This document describes the commands for ISO 15693 support of OMNIKEY Contactless Smart Card reader.

Applicable readers are:

OMNIKEY 5321 USB
 OMNIKEY 6321 USB
 OMNIKEY 5321 CL
 OMNIKEY 5321 CR
 OMNIKEY 5421

Applicable drivers and operating system:

MS Windows Drivers Version from 1.2.0.6.

11.2 Tags

The following tags and functions are covered by this document

- iCODE (see the following table)
- LRI 64
- SLC Montalbano Technology
- Texas Instruments Tag-it¹
- Infineon (MY-D, MY-D light)²
- All ISO 15693-3 compliant Tags with support for functions marked as **optional**. (Include tag functions **Inventory, Stay Quiet** ...etc.)

Support for iCODE tags

Card Type	Chip Type	Support
ICODE 1	SL2 ICS30 01	UID, (Not ISO15693 Part3 compliant)
ICODE SLI	SL2 ICS20	Full
ICODE EPC	SL2 ICS10	Not supported
ICODE UID	SL2 ICS11	Not supported
ICODE UID-TOP	SL2 ICS12	Not supported
ICODE SLI-S / SLI-S HC	SL2 ICS53 / ICS54	Full support. Exception is GetSecurityStatus, which is not supported by the card. For further information see the datasheet [iCODE SL2].

¹ Tag-it Standard and Pro do only support READ BINARY, UPDATE BINARY, GET DATA PICC memory and LOCK, Applicable at MS Windows Drivers Version 1.2.0.14

² Applicable at MS Windows Drivers Version 1.2.0.14

11.3 Commands

11.3.1 Get Data

This Get Data command will retrieve information about the inserted command depending on the inserted card. It can be used for kind of contactless cards.

GET DATA Command APDU

Command	Class	INS	P1	P2	Lc	Data In	Le
Get Data	0xFF	0x30	XX	0x00	-	-	XX

P1/P2 denotation

P1	P2	Description
0x00	0x00	RFU
0x01	0x00	RFU
0x02	0x00	AFI of a ISO 15693 card is returned if supported
0x03	0x00	DSFID of a ISO 15693 card is returned if supported
0x04	0x00	PICC memory size is returned if supported
0x05	0x00	IC reference is returned if supported
0x06	0x00	EAS sequence (only for I-CODE SLI cards) is returned , Note: EAS sequence is a bit stream which is sent LSB first !!!

GET DATA Command Output

Data Out
Data + SW1 SW2

Le = 0x00, this means: Return full length of the data

SW1SW2 Examples

	SW1	SW2	Meaning
Warning	'62'	'82'	End of data reached before Le bytes (Le is greater than data length).
Error	'6A'	'81'	Function not supported
	'6C'	'xx'	Wrong length (wrong number Le; 'XX' encodes the exact number) if Le is less than the available UID length)

11.3.2 Put Data

Use this command to write system information to a contactless card.

Put Data Command APDU

Command	Class	INS	P1	P2	Lc	Data In	Le
Put Data	0xFF	0x30	0x00	0x01	3 + N	See table	-

Put Data bytes

Byte 1	Byte 2	Byte 3	Byte 4..n
Version 0x01	Flag1	Flag2	Data

Put Data Flag denotation for version 0x01

Flag1	Flag2	
0x00	0x00	RFU
0x01	0x00	RFU
0x02	0x00	AFI of a ISO 15693 card is written if supported
0x03	0x00	DSFID of a ISO 15693 card is written if supported
0x04	0x00	RFU
0x05	0x00	RFU
0x06	0x00	EAS bit is written (for I-Code SLI) cards. Data field consists of one byte (bit 0 is the new value of the EAS bit) ³
0x00	0x01	Stay quiet (the PICC does not answer any more any response), currently not supported

The following table introduces examples of SW1SW2 and their meaning.

Put data Command Error Codes

	SW1	SW2	Meaning
Warning	'62'	'82'	Block or field is locked
	'63'	'00'	No information is given
Error	'64'	'00'	Execution error ⁴
	'6A'	'81'	Function not supported
	'69'	'82'	Security status not satisfied
		'86'	Command not allowed, no ISO15693-3 chip

³ EAS is supported by MY-D; EAS must be enabled in AFI byte (bit 2)!

⁴ The chip does not support the optional ISO15693-3 command type.

11.3.3 Lock

Use this command to lock the memory area of a contactless card.⁵

Lock APDU

Command	Class	INS	P1	P2	Lc	Data In	Le
Lock	0xFF	0x30	0x00	0x02	3 + N	See table	-

Lock data bytes

Byte 1	Byte 2	Byte 3	Byte 4..n
Version 0x01	Flag1	Flag2	Data

Lock Flag denotation for version 0x01

Flags1	Flags2		Data1	Data2
0x00	0x00	Data field contains in 2 bytes the block number	Address (MSB)	Address (LSB)
0x01	0x00	RFU	-	-
0x02	0x00	AFI of a ISO 15693 card is locked if supported	-	-
0x03	0x00	DSFID of a ISO 15693 card is locked if supported	-	-
0x04	0x00	RFU	-	-
0x05	0x00	RFU	-	-
0x06	0x00	EAS bit (only for I-CODE SLI cards) is locked	-	-

The following table introduces SWISW2 examples.

Lock Command Error Codes

	SW1	SW2	Meaning
Warning	'62'	'82'	Block or field already locked
	'63'	'00'	No information is given
Error	'6A'	'81'	Function not supported
	'69'	'82'	Security status not satisfied
		'86'	Command not allowed, no ISO15693-3 chip

⁵ Command is not supported by MY-D light; to set and get security you can use the generic command. Reference the Infineon MY-D light specification and OK5x21_ISO15693_GenericCardCommands.doc

11.3.4 Get Security Status

Use this command to retrieve the security status of some memory area of a contactless card.⁶

Get Security Status Command APDU

Command	Class	INS	P1	P2	Lc	Data In	Le
Get Security Status	0xFF	0x30	0x00	0x03	3 + N	See table	XX

Get Security Status data bytes

Byte 1	Byte 2	Byte 3	Byte 4..n
Version 0x01	Flag1	Flag2	Data

Get Security Status Flag denotation for version 0x01

Flag1	Flag2		Data1	Data2
0x00	0x00	Block	Address (MSB)	Address (LSB)
0x01	0x00	RFU	-	-
0x02	0x00	AFI (only supported for MY-D, not MY-D light)	-	-
0x03	0x00	DSFID (currently not supported)	-	-
0x04	0x00	RFU	-	-
0x05	0x00	RFU	-	-
0x06	0x00	EAS (not supported by I-CODE-SLI)	-	-

Le codes the number of bytes for which the security status should be retrieved.

⁶ Command is not supported by MY-D light; to set and get security, use the generic command. Reference the Infineon MY-D light specification and OK5x21_ISO15693_GenericCardCommands.doc

For each address/block number/page number, retrieved is one byte with the security status.

I-CODE SLI	Data 1, Data 2 contains the block number (0 - 27). Each block has 4 bytes.
LRI 64	Data 1, Data 2 contains the block number (0 - 14). Each block has 1 byte.
SLC Montalbano Technology	Data 1, Data 2 contains the block number (0 - 63). Each block has 8 bytes.
MIFARE 1k	Data1, Data2 contains the block number (0 - ((16 * 4) -1)) Note: MIFARE 1k has 16 sectors. Each sector has 4 blocks. Each block has 16 bytes. (Get Security Status currently not supported)
MIFARE 4k	Data1, Data2 contains the block number (0 - ((32 * 4 + 16*4) -1)) Note: MIFARE 4k has 32 sectors which have 4 blocks and 16 sectors which have 16 blocks. Each block has 16 bytes. (Get Security Status currently not supported)
MIFARE Ultralight	Data1, Data 2 contains the page number (0 - 15). Each page has 4 bytes. (Get Security Status currently not supported)
MIFARE Mini	Data1, Data2 contains the block number (0 - ((5 * 4) -1)) Note: MIFARE Mini has 5 sectors. Each sector has 4 blocks. Each block has 16 bytes. (Get Security Status currently not supported)
MY-D	Data 1, Data 2 contains the block number. (SRF55V10P: 0 - 247, SRF55V02P: 0 - 55) Each block has 4 bytes.

The following describes the security status byte.

Type of card	B7	B6	B5	B4	B3	B2	B1	B0
ISO15693-3 compliant chip	x	x	x	x	x	x	x	Write access bit
MIFARE 1K	x	x	x	x	x	C1	C2	C3
MIFARE 4K	x	x	x	x	x	C1	C2	C3
MIFARE Ultralight	x	x	x	x	x	x	x	Lock bit
MIFARE Mini	x	x	x	x	x	C1	C2	C3

X no meaning

The following table describes examples of SW1SW2 and their description:

Get Security Status Error Codes

	SW1	SW2	Description
Warning	'63'	'00'	No information is given
Error	'64'	'00'	Execution error ⁷
	'6A'	'81'	Function not supported
	'69'	'82'	Security status not satisfied
		'86'	Command not allowed, no ISO15693-3 chip

⁷ The chip does not support the optional ISO15693-3 command type.

11.3.5 Read Binary Command

If the Le field contains only bytes set to '00', then all the bytes until the end of the file shall be read within the limit of 256 for a short Le field or 65 536 for an extended Le field⁸.

Read Binary Command APDU

Command	Class	INS	P1	P2	Lc	Data in	Le
Read Binary	0xFF	0xB0	Address MSB	Address LSB	-	-	XX

Read Binary Command Output

Data Out
Data + SW1 SW2

Read Binary Command Error Codes

	SW1	SW2	Meaning
Warning	'62'	'81'	Part of returned data may be corrupted.
		'82'	End of file reached before reading expected number of bytes.
Error	'69'	'81'	Command incompatible.
		'82'	Security status not satisfied.
		'86'	Command not allowed.
	'6A'	'81'	Function not supported.
		'82'	File not found / Addressed block or byte does not exist.
'6C'	'XX'	Wrong length (wrong number Le; 'XX' is the exact number).	

Le must be a multiple of the block size !

⁸ Currently are extended APDU's only supported for Texas Instruments Tag-it and Infineon MY-D.

11.3.6 Update Binary Command

The Lc field contains the length of the field **Data in** field. For a short Lc field the data length is $1 \leq Lc < 256$ and for an extended Lc field⁹ the data length is $1 \leq N_c < 65\,536$.

Update Binary Command APDU

Command	Class	INS	P1	P2	Lc	Data in	Le
Update Binary	0xFF	0xD6	Address MSB	Address LSB	XX	Data	-

Update Binary Command Output

Data Out
SW1 SW2

Update Binary Command Error Codes

	SW1	SW2	Meaning	
Warning	'62'	'81'	A part of the returned data may be corrupted.	
		'82'	End of file reached before writing Lc bytes.	
Error	'65'	'81'	Memory failure (unsuccessful writing).	
		'69'	'81'	Command incompatible.
			'82'	Security status not satisfied.
			'86'	Command not allowed.
		'6A'	'81'	Function not supported.
'82'	File not found / Addressed block or byte does not exist.			

Lc must be a multiple of the block size!

⁹ Currently are extended APDU's only supported for Texas Instruments Tag-it and Infineon MY-D.

11.3.7 Update Single Byte Command

Use this command to write a single byte within a block. Currently, this command is only supported for Infineon MY-D.

Update Single Byte Command APDU

Command	Class	INS	P1	P2	Lc	Data In	Le
Update Single Byte	0xFF	0xD7	0x00	0x00	6	See table	-

Update Single Byte Data bytes

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6
Version 0x01	Block Address MSB	Block Address LSB	Offset within Block MSB	Offset within Block LSB	Data to be written

The offset must be less than block size.

Update Single Byte Command Output

Data Out
SW1 SW2

Update Single Byte Command Error Codes

	SW1	SW2	Meaning
Error	'65'	'81'	Memory failure (unsuccessful writing).
	'69'	'82'	Security status not satisfied.
	'6A'	'81'	Function not supported.
		'82'	File not found / Addressed block or byte does not exist.

12 OMNIKEY 5321 PAY Application Interface

The OMNIKEY 5321 PAY has an EMVCo Contactless Level 1 Type Approval. The application interface (API) is compliant with PC/SC 2.01.

12.1 PayPass Card Transactions

For card detection, the application uses the SCardStatusChange() function. If a PAY card is present check the SCARD_STATE_MUTE status flag. If the SCARD_STATE_MUTE status flag is 1, the PCD has found more than one card in the operation volume (collision detected). If this status flag is zero, then the application continues with the card transactions, for example, Select PPSE (Proximity Payment System Environment).

For transactions with a PAY Card, the application uses the SCardTransmit() function.

See *Appendix A.7.10 EMVCo Contactless Level 2 Transactions*.

If all transactions are complete the application must disconnect the card with the dwDisposition value **SCARD_UNPOWER_CARD**. This is necessary for the correct card removal procedure of the PCD.

12.2 LED and Buzzer Control

For LED and buzzer control the device provides a PC/SC IO-Control. Use this IO-Control for the activation of OMNIKEY 5321 PAY read indication. The OMNIKEY 5321 PAY can use the PayPass™ light/LED method for read indication and the additional tree indicators must light the sequence. An audio indication (buzzer) can be used to indicate the success tone. For more information about the light/LED read indication method, see the relevant ongoing specification from EMVCo and MasterCard® PayPass.

Table 1: Parameter for IO-Control SIGNAL

SCardControl Parameter	Description		
dwControlCode	CM_IOCTL_SIGNAL		
lpInBuffer	+0	PPARAM_SIGNAL	UCHAR ucCommand
			UCHAR ucParam1
			UCHAR ucParam2
			UCHAR ucRFU[10]
nInBufferSize	>= 3		
lpOutBuffer	Empty		
nOutBufferSize	>= 0		
lpBytesReturned	0		

Table 2: Summary of SIGNAL Commands

Command	Value	Description
PAYPASS_SIGNAL	0x20	Complete PayPass Audio and Visual Sequence
PAYPASS_SIGNAL_MAINLED	0x21	Control of Main LED
PAYPASS_SIGNAL_ADDLED	0x22	Control of additional PayPass LED 2-4
ACOUSTIC_SIGNAL_BEEPER_ON	0x10	Control of PayPass Audio Tone ON
ACOUSTIC_SIGNAL_BEEPER_OFF	0x11	Control of PayPass Audio Tone OFF

12.2.1 SIGNAL Command - PayPass Signal

This command clones the PayPass Audio and Visual Sequence for the event **Card read complete successful**, according to **MasterCard PayPass Terminal Implementation Guide**.

Table 3: Parameter for SIGNAL Command - PayPass Signal

Parameter	Description			
	Command	Param1	Param2	RFU
lpInBuffer	20	loudness	--	--
	>= 2			
nInBufferSize	Empty			
lpOutBuffer	>= 0			
nOutBufferSize	0			
lpBytesReturned				

12.2.2 SIGNAL Command - PayPass Signal MAIN LED

The reader main LED (red/green bicolor) is by default under control of the firmware and driver. In cases of MasterCard PayPass terminal implementation, an application control of this LED is required. With this command the application assumes the LED control.

Table 4: Parameter for SIGNAL Command - PayPass Signal MAIN LED

Parameter	Description				
	Command	Param1	Param2	Param3	RFU
lpInBuffer	21	00 - CCID ESC command 01 - USB Pipe Control	LED status	00 - by default 03 - application controlled	--
	>= 4				
nInBufferSize	Empty				
lpOutBuffer	>= 0				
nOutBufferSize	0				
lpBytesReturned					

For LED control, before receiving the PICC answer, the application must use Param1 = 01 as, USB Pipe Control Command.

Param2 is coded as 0000 00xx (bit 2...7 is RFU).

Table 5 - Summary of Param2

LED status	Value	Description
Bit 0	1	bicolor green LED on
	0	bicolor green LED off
Bit 1	1	bicolor red LED on
	0	bicolor red LED off

For details, see the code example *in Appendix A.7.12 PayPass Signal MAIN LED*.

12.2.3 SIGNAL Command - PayPass Signal Additional LEDs

For the status of the contactless payment application the MasterCard PayPass terminal implementation requires three additional LEDs for visual indication. For example the contactless application process was completed successfully. These three LEDs are exclusive for the application. Driver and firmware do not use these three additional LEDs.

Table 6 - Parameter for SIGNAL Command - PayPass Signal Additional LEDs

Parameter	Description				
	Command	Param1	Param2	Param3	RFU
lpInBuffer	22	00 - CCID ESC command 01 - USB Pipe Control	LED status	--	--
nInBufferSize	>= 3				
lpOutBuffer	Empty				
nOutBufferSize	>= 0				
lpBytesReturned	0				

Param2 is coded as 0000 0xxx (bit 3...7 is RFU)

Summary of Param2

LED status	Value	Description
Bit 0	1	green LED2 on
	0	green LED2 off
Bit 1	1	green LED3 on
	0	green LED3 off
Bit 2	1	green LED4 on
	0	green LED4 off

For details see the code example in *Appendix A.7.13 PayPass Signal Additional LEDs*.

12.2.4 SIGNAL Command - PayPass Signal Tone

No command parameters are required. The command code 0x10 (ACOUSTIC_SIGNAL_BEEPER_ON) turn on the buzzer and the command code 0x11 (ACOUSTIC_SIGNAL_BEEPER_OFF) turn off the buzzer. See the Table 8 - Summary of SIGNAL Commands.

For details, see *Appendix A.7.14 PayPass Signal Tone*.

12.3 Switch-over the Operating Mode

The OMNIKEY 5321 PAY requires the EMVCo Level 1 PCD processing. After the driver is installed, the PCD (Proximity Coupling Device) starts in PAY mode by default. Also use the reader in standard ISO mode. For dynamically changing between RFID-ISO and EMVCo L1 mode, the driver supports an IO-Control, described in this chapter. See also the code example in *Appendix A.7.11 Set RFID operating mode*.

Note: The operating volume is optimized for EMVCo L1. This is not compliant with the requirements of ISO / ICAO.

Parameter for IO-Control Set RFID Operation Mode

SCardControl Parameter	Description						
dwControlCode	CM_IOCTL_SET_OPERATION_MODE						
lpInBuffer	+0	bOperationMode	<table border="1"> <tr> <td>0x10</td> <td>OPERATION_MODE_RFID_ISO</td> </tr> <tr> <td>0x11</td> <td>OPERATION_MODE_RFID_PAYPASS</td> </tr> </table>	0x10	OPERATION_MODE_RFID_ISO	0x11	OPERATION_MODE_RFID_PAYPASS
0x10	OPERATION_MODE_RFID_ISO						
0x11	OPERATION_MODE_RFID_PAYPASS						
nInBufferSize	>= 1						
lpOutBuffer	Empty						
nOutBufferSize	>= 0						
lpBytesReturned	0						

If the reader is switched to ISO mode, use the complete functionality of a standard OMNIKEY Contactless Smart Card reader.

Note: Currently the EMVCo type approval is confined to the firmware version 1.75. This firmware version does not support the read and write operations of iCLASS cards.

For a static usage in ISO mode switch the reader behavior with the following registry entry:

```
[HKEY_LOCAL_MACHINE\SYSTEM\CurrentControlSet\Control\CardMan\CardInterface]
ContactlessDefault=dword:00000000
```


13.3 Available ProxFormat Settings

In addition to HID PROX standard card formats such as H10301, H10302, H10304, H10320 and Corp 1000 there are hundreds of proprietary formats. This means, that the same bit stream can be interpreted in many different ways using ProxFormat settings shown below.

Table 7: ProxFormat Settings

ProxFormat Value Hex	Card format	Data content	Windows	Linux/MacOS
No key	Wiegand Raw	-	Yes (default) ¹	No
00	Wiegand Raw	-	Yes	Yes
01	H10301	26 bit (FAC+CN)	Yes	No
02	H10302	37 bit (CN)	Yes	No
04	H10304	37 bit (FAC+CN)	Yes	No
14	H10320	32 bit clock/data card	Yes	No
64	Corp 1000	35 bit (CIC+CN)	Yes	No
FE	AUTO	Automatic mode	Yes	Yes (default) ²
FF ³	CUSTOM	Customer defined	Yes	Yes

¹ During driver installation on Windows-based systems, no ProxFormat key is set. The driver interprets this as if ProxFormat were set to zero i.e. the ATR returns Wiegand raw data.

² ProxFormat settings are not part of the driver installation on systems running Linux/MacOS. The driver interprets this as if ProxFormat were set to zero FE hex (automatic mode)

³ Setting ProxFormat to CUSTOM requires additional registry keys CostomProxFormat.

13.3.1 ProxFormat Settings on Systems Running Windows

By default, the OMNIKEY reader system returns raw Wiegand data. This default behavior can be changed using the ProxFormat Windows registry entry. Note that it requires administrator rights to install and configure the OMNIKEY PROX reader driver and PROX card registry settings.

The ProxFormat registry entry resides in the following registry path:

[HKEY_LOCAL_MACHINE\SYSTEM\CurrentControlSet\Control\CardMan]

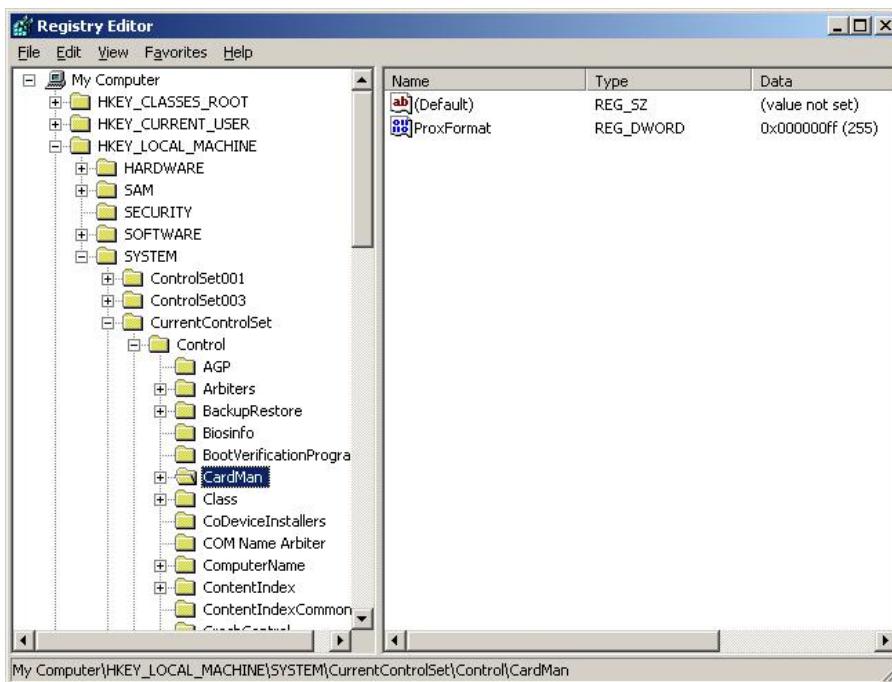


Figure 9: ProxFormat Registry Entry

13.3.2 ProxFormat Settings on Systems Running Linux and MacOS X

By default, Linux and MacOSX-based systems are configured to automatic PROX card detection mode. Driver configuration settings are read from a file named cmrfid.ini residing in /etc/ directory. The INI file contains sections and entries similar to the Windows registry settings.

Examples:

```
Contents of file cmrfid.ini to set ProxFormat to AUTO
[ProximityOptions]
ProxFormat = 254
```

Contents of file cmrfid.ini to set ProxFormat to CUSTOM

```
[ProximityOptions]
ProxFormat = 255

[CustomProxFormat-A]
StartBit = 14
BitLength = 10

[CustomProxFormat-B]
StartBit = 1
BitLength = 13
```

14 ProxFormat Settings

14.1 Wiegand Raw Data Mode

ProxFormat = 0

This mode gives you the greatest flexibility. This is important in systems without a well-known card population i.e. where the card format can vary or even is unknown. Having this flexibility comes at a price though, any parsing that otherwise is done by the driver would have to be done by the hoist application.

14.2 Standard Format Modes

H10301, H10302, H10304, H10320 and Corporate 1000 are standard card formats supported via dedicated ProxFormat setting according to the following table.

CARD			ProxFormat Setting (hex format)	ATR
FORMAT	FAC / CIC	CN		
H10301	AAAA	BBBBBB	01	3B 06 01 AA AA BB BB BB
H10302	-	BBBBBBBBBBBB	02	3B 07 02 BB BB BB BB BB BB
H10304	AAAAA	BBBBBB	04	3B 07 04 0A AA AA BB BB BB
H10320	-	BBBBBBBB	14	3B 05 14 BB BB BB BB
Corp 1k	AAAA	BBBBBBBB	64	3B 07 64 AA AA BB BB BB BB

Example:

Setting ProxFormat to '01' instructs the driver to interpret the series of bits received from a PROX card as HID H10301 formatted PROX data. The rightmost six BCD formatted digits of the historical byte block represent the card number CN. The card number can also be found engraved on the card.

With ProxFormat set to '01', a card with FAC=0001 and CN=000061 would return an ATR of '3B 06 01 00 01 00 00 61'.

TIP: If you do not know whether you have a standard or custom formatted card, set ProxFormat to hex FE (AUTO). Then present the card. If the reader can detect a standard card format, it will return its respective ProxFormat value in the third ATR byte. This is a quick way to find out the format of the most popular cards.

14.3 Automatic Mode

ProxFormat = FE hex = 254 dec

In AUTO mode, the driver tries to parse the bit stream and match it with a known format. This mode is only recommended for the following card formats

H10301, H10302, H10320 and Corporate 1000

Note: that automatic mode is restricted to the card formats listed above. H10304 is not part of this list because the reader system can't distinguish H10302 cards from H10304 cards. They are both 37 bit formats. The only difference between the two formats is that H10304 formatted cards contain a facility code whereas H10302 cards do not.

14.4 Custom Format Mode

ProxFormat set to FFhex = 255dec. This mode requires additional CustomProxFormat settings. This mode allows you to configure the card system for any standard or customized card format.

14.4.1 CustomProxFormat Settings

In addition to setting ProxFormat to 255dec, CustomProxFormat settings must be set. This tells the OMNIKEY PROX reader driver where to find meaningful data fields within the raw Wiegand bit sequence.

The raw bit-data-stream can be split into up to 15 several data-fields. Each data field is labeled with a letter (A, B ...etc.). Each data field is defined by its StartBit and BitLength. Data fields may reflect a card number CN or a facility code FAC.

The StartBit entry specifies the position in the bit-data-stream, starting with the least significant bit (LSb) – that's all the way to the right.

Example:

00000100 bin ... bit0=0, bit1=0, bit 2=1,....

Whenever custom ProxFormat is used, there have to be additional settings to define start bits and the number of bits for the required custom format. For an HID PROX H10301 formatted card, you would need the following additional entries to get its FAC and CN with ProxFormat set to 255. These entries tell the driver where to start and how many bits to interpret as data field for any given section.

Windows Registry:

```
[HKLM\SYSTEM\CurrentControlSet\Control\CardMan\CustomProxFormat\A]
StartBit=dword:00000011
BitLength=dword:00000008
[HKLM\SYSTEM\CurrentControlSet\Control\CardMan\CustomProxFormat\B]
StartBit=dword:00000001
BitLength=dword:00000010
```

Linux/MaxOSX ini file:

```
[CustomProxFormat-A]
StartBit = 17
BitLength = 8
[CustomProxFormat-B]
StartBit = 1
BitLength = 16
```



The following sections show CustomProxFormat entries for some standard PROX card formats including the raw data and resulting parsed and interpreted data fields for facility code and card number.

14.5 Example: H10301 PROX Card

The following example demonstrates how to extract the facility code FAC=1 and card number CN=12345 from a H10301 formatted 26 bit PROX card. With its two parity bits this card can hold 24 information bits.

14.5.1 Standard Format

The standard format H10301 is supported via ProxFormat = 1 and 254(AUTO)

14.5.2 Wiegand Raw Data

ProxFormat = 0

```

ATR:                3B 05 00 02 02 60 73 hex
Historical Bytes:   02 02 60 73 hex = 00000010000000100110000001110011
bin
000000PaaaaaaaabbbbbbbbbbbbbbbbPP
00000010000000100110000001110011
P Parity Bit
a Facility Code (FAC) bits
b Card Number (CN) bits
FAC = 00000001 bin = 0001 dec (4 digits, defined by H10301 format)
CN = 0011000000111001 bin = 012345 dec (6 digits, defined by H10301 format)
    
```

14.5.3 CustomProxFormat Settings

ProxFormat = 255

Windows CustomProxFormat Settings:

```

[HKEY_LOCAL_MACHINE\SYSTEM\CurrentControlSet\Control\CardMan\CustomProxFormat\A]
StartBit=dword:00000011
BitLength=dword:00000008
[HKEY_LOCAL_MACHINE\SYSTEM\CurrentControlSet\Control\CardMan\CustomProxFormat\B]
StartBit=dword:00000001
BitLength=dword:00000010
    
```

Linux, MacOSX CustomProxFormat Settings:

```

[CustomProxFormat-A]
StartBit = 17
BitLength = 8
[CustomProxFormat-B]
StartBit = 1
BitLength = 16
    
```

14.5.4 ATRs of a H10301 Card

	H10301 PROX card FAC=1 , CN=12345
ProxFormat = 0 (RAW)	3B 05 00 02 02 60 73
ProxFormat = 1 (H10301)	3B 06 01 00 01 01 23 45
ProxFormat = 254 (AUTO)	3B 06 01 00 01 01 23 45
ProxFormat = 255 (CUSTOM) CustomProxFormat\A: StartBit/Length = 17/8 CustomProxFormat\B: StartBit/Length = 1/16	3B 06 FF 00 01 01 23 45

14.6 Example: H10302 PROX Card

The following example demonstrates how to extract the card number CN=1 from a H10302 formatted 37 bit PROX card. This type of card has no facility code available. With its two parity bits this card can hold 35 information bits.

14.6.1 Standard Format

The standard format H10302 is supported via ProxFormat = 2 and 254(AUTO)

14.6.2 Wiegand Raw Data

ProxFormat = 0

```

ATR:                3B 06 00 00 00 00 02 hex
Historical Bytes:   00 00 00 00 02 hex =
000000000000000000000000000000000000000010 bin
PaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaP
000000000000000000000000000000000000000010
P Parity Bit
a Card Number (CN) bits
CN = 000000000000000000000000000000001 bin = 0000000001 dec (11 digits,
defined by H10302 format)

FAC = N/A
    
```

14.6.3 CustomProxFormat Settings

ProxFormat = 255

Windows CustomProxFormat Settings:

```

[HKEY_LOCAL_MACHINE\SYSTEM\CurrentControlSet\Control\CardMan\CustomProxFormat\A]
StartBit=dword:00000001
BitLength=dword:00000023
Linux, MacOSX CustomProxFormat Settings:
[CustomProxFormat-A]
StartBit = 1
BitLength = 35
    
```

14.6.4 ATRs of a H10302 Card

	H10302 PROX card CN=00000000001
ProxFormat = 0 (RAW)	3B 06 00 00 00 00 02
ProxFormat = 2 (H10302)	3B 07 02 00 00 00 00 01
ProxFormat = 254 (AUTO)	3B 07 02 00 00 00 00 01
ProxFormat = 255 (CUSTOM) CustomProxFormat\A: StartBit/Length = 1/35	3B 07 FF 00 00 00 00 01

14.8 Example: Corp 1000 PROX Card

The following example demonstrates how to extract the customer ID code CIC=4096 and card number CN=2 from a Corp 1000 formatted 35 bit PROX card. Due to three parity bits this card format holds 32 information bits.

14.8.1 Standard Format

The standard format Corp 1000 is supported via ProxFormat = 100 or 254(AUTO)

14.8.2 Wiegand Raw Data

ProxFormat = 0

```

ATR:                3B 06 00 03 FF E0 00 05 hex
Historical Bytes:   03 FF E0 00 05 hex =
011111111111110000000000000000000101 bin
PPaaaaaaaaaaaaabbbbbbbbbbbbbbbbbbbP
011111111111000000000000000000101
P Parity Bit
a Facility Code (FAC) bits
b Card Number (CN) bits
CIC = 1111111111 bin = 4095 dec (4 digits, defined by Corp 1000
format)
CN = 0000000000000000000010 bin = 00000002 dec (8 digits, defined by Corp 1000
format)
    
```

14.8.3 CustomProxFormat Settings

ProxFormat = 255

```

[HKEY_LOCAL_MACHINE\SYSTEM\CurrentControlSet\Control\CardMan\CustomProxFormat\A]
StartBit=dword:00000015
BitLength=dword:0000000C
[HKEY_LOCAL_MACHINE\SYSTEM\CurrentControlSet\Control\CardMan\CustomProxFormat\B]
StartBit=dword:00000001
BitLength=dword:00000014
Linux, MacOSX CustomProxFormat Settings:
[CustomProxFormat-A]
StartBit = 21
BitLength = 12
[CustomProxFormat-B]
StartBit = 1
BitLength = 20
    
```

14.8.4 ATRs of a Corp 1000 Card

	Corp 1000 PROX card CIC=4095, CN=2
ProxFormat = 0 (RAW)	3B 06 00 03 FF E0 00 05
ProxFormat = 100 (Corp 1000)	3B 07 64 40 95 00 00 00 02
ProxFormat = 254 (AUTO)	3B 07 64 40 95 00 00 00 02
ProxFormat = 255 (CUSTOM) CustomProxFormat\A: StartBit/Length = 21/12 CustomProxFormat\B: StartBit/Length = 1/20	3B 07 FF 40 95 00 00 00 02

Appendix: A Application Programming

The following C++ sample project is part of the synchronous API which can be downloaded from our website at www.hidglobal.com/omnikey.

If you choose the default installation settings, sample code is found in:

```
c:\Program Files\HID Global\Sync-API\Samples\contactlessdemovc.
```

Sample code for Visual Basic is also available and found in:

```
c:\Program Files\Samples\contactlessdemovb.
```

The sample uses the OMNIKEY synchronous API and demonstrates how to select a reader, connect a card, and access either a MIFARE or iCLASS card.

A.1 Overview

From the **Connected Reader** list (top-left corner), select the reader. The list contains all readers available to the smart card resource manager. When a card is inserted, displayed are the **ATR**, **UID** and **Card Name** fields. From the **Reader Related Function** frame, select the functions with or without a card in the RF field.

Only use the **MIFARE Functions using Sync API** frame when a MIFARE card is in the field. Use the **ISO 7816/iCLASS/PCSC 2.01** frame for APDU exchange with a CPU card (asynchronous card) in the field.

Each processed command produces output in the output log. Clear the log with the **Refresh Output Screen** button. The return status of the last executed function is shown in the **Last Operation Status** frame.

Close the application with the **Exit** button.

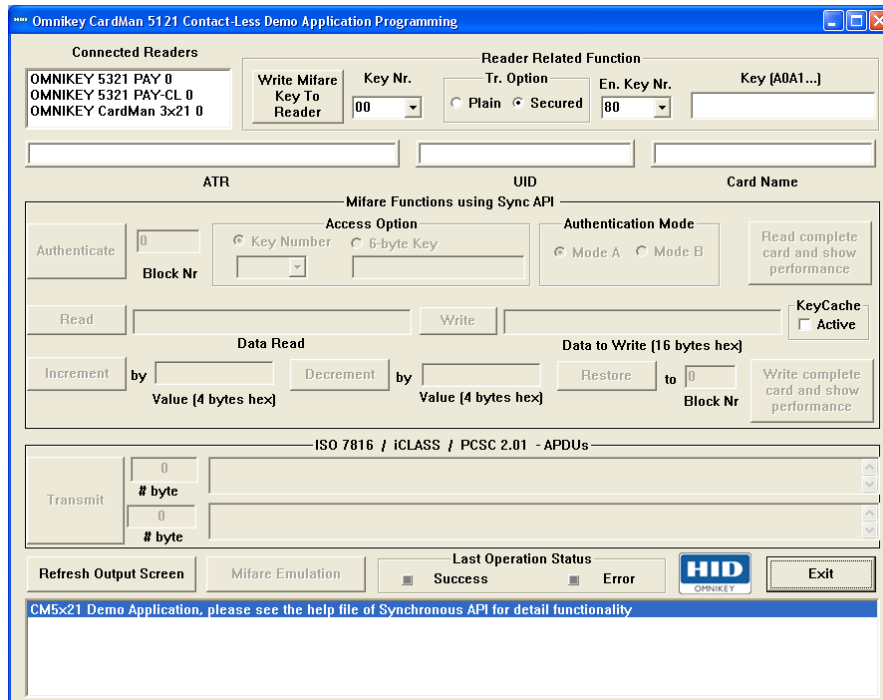


Figure 10: Sample Program Screen

A.2 Reader Related Functions

Reader related functions do not require a card in the field.

To store a MIFARE key, complete the following:

- Define a key number to determine where to store the key.
- Select plain or secured as the mode of the key transmission. For secured transmissions, use transmission key number 0x80 or 0x81.
- Enter the key in hex string format to the text field **MIFARE Key**. For plain transmissions enter a 6 byte, 12 hex digit value (no spaces). For secured transmission enter an 8 byte value.
- Click on the **Write MIFARE Key to Reader** button to load the key to reader memory.

A.3 MIFARE Functions Using Synchronous API

Before using the **MIFARE Functions using Sync API**, authenticate the card. (MIFARE UltraLight does not need authentication).

To authenticate to a block of the card complete the following:

- In the field **Block Nr**, enter the authentication block number.
- In the field **Access Option** choose to supply a key number or plain key.
- In the field **Authentication Mode** choose **Mode A** or **B**.
- Press the **Authenticate** button.

Upon successful authentication, you can read and write data blocks and use the increment and decrement functions.

A.4 PC/SC 2.01

Enter an APDU according to PC/SC 2.01 to access storage cards such as MIFARE cards directly without using the OMNIKEY proprietary synchronous API.

A.5 ISO 7816 - APDU

Enter an APDU for your CPU (asynchronous) card and send the APDU the same way as an ISO7816 contact card.

A.6 iCLASS Standard Mode

Present an iCLASS card to the reader RF field, and send APDUs directly to the card, see *Section 9 Standard Communication with iCLASS Card*. This is an easy way of experimenting with the available functions.

A.7 Code Examples

This section lists coding examples for a PC/SC 2.01 compliant implementation.

A.7.1 Getting the Card UID (PC/SC 2.01)

The following function retrieves the unique card ID (UID) currently connected to the card through the air interface. Use the UID as the card serial number. The UID is available for every ISO 14443 A/B or ISO 15693 compliant cards. It does not matter whether the card is a CPU or storage card. This makes GetUID the ideal candidate for Hello Card type applications. If you do not have access to application keys, the UID serves as a valuable identifier allowing card lookup on a backend database.

```

BOOLEAN GetUID(UCHAR *UID, int &sizeofUID)
{
    ucByteSend[0] = 0xFF; //CLA
    ucByteSend[1] = 0xCA; //INS
    ucByteSend[2] = 0x00; //P1
    ucByteSend[3] = 0x00; //P2
    ucByteSend[4] = 0x00; //Le
    ulnByteSend = 5;
    printf("\nRetrieving the UID.....");
    SCard_Status = SCardTransmit(hCard, SCARD_PCI_T1, ucByteSend, ulnByteSend, NULL,
        ucByteReceive, &dwRecvLength);
    if (SCard_Status != SCARD_S_SUCCESS)
    {
        printf("\nProblem in SCardTransmit, Error code = 0x%04X, SCard_Status);
        return FALSE;
    }
    if(ucByteReceive[dwRecvLength-2] != 0x90 || ucByteReceive[dwRecvLength-1] !=
0x00)
    {
        printf("\nWrong return code: %02X%02X,
            ucByteReceive[dwRecvLength-2], ucByteReceive[dwRecvLength-1]);
        return FALSE;
    }
    sizeofUID = dwRecvLength-2;
    memcpy(UID, ucByteReceive, sizeofUID);
    return TRUE;
}

```

A.7.2 Loading a MIFARE Key (PC/SC 2.01)

The following code loads a MIFARE key to the reader. The key is stored in non-volatile memory. Once loaded, it remains available throughout the reader session.

```
BOOLEAN LoadKey(UCHAR ucKeyNr, UCHAR *ucKey, UCHAR ucKeyLength)
{
    ucByteSend[0] = 0xFF;           //CLA
    ucByteSend[1] = 0x82;           //INS
    ucByteSend[2] = 0x20;           //P1 card key, plain transmission, non-volatile
memory
    ucByteSend[3] = ucKeyNr;        //P2 key number for MIFARE could be 0x00 to 0x31)
    ucByteSend[4] = ucKeyLength;    //Lc
    memcpy(ucByteSend+5,ucKey, ucKeyLength );
    ulnByteSend = 5+ucKeyLength;
    printf("\nLoading Key to the reader.....");
    SCard_Status = SCardTransmit(hCard,SCARD_PCI_T1,ucByteSend,ulnByteSend,NULL,
        ucByteReceive, &dwRecvLength);
    if (SCard_Status != SCARD_S_SUCCESS)
    {
        printf("\nProblem in SCardTransmit, Error code = 0x%04X,SCard_Status);
        return FALSE;
    }
    if(ucByteReceive[dwRecvLength-2] != 0x90 || ucByteReceive[dwRecvLength-1] !=
0x00)
    {
        printf("\nWrong return code: %02X%02X,
ucByteReceive[dwRecvLength -2],ucByteReceive[dwRecvLength-1]);
        return FALSE;
    }
    return TRUE;
}
```

A.7.3 MIFARE 1K/4K Authenticate (PC/SC 2.01)

The following code demonstrates how to authenticate a MIFARE card.

```
BOOLEAN Authenticate(UCHAR BlockNr, UCHAR ucKeyNr, UCHAR ucKeyType)
{
    ucByteSend[0] = 0xFF;        // CLA
    ucByteSend[1] = 0x88;        // INS
    ucByteSend[2] = 0x00;        // P1, MIFARE Block Number MSB, for MIFARE it is
always 0x00
    ucByteSend[3] = BlockNr;    // MIFARE Block Number LSB
    ucByteSend[4] = ucKeyType;  // P3
    ucByteSend[5] = ucKeyNr;
    ulnByteSend = 6;
    printf("\nAuthenticating .....");
    SCard_Status = SCardTransmit(hCard, SCARD_PCI_T1, ucByteSend, ulnByteSend, NULL,
                                ucByteReceive, &dwRecvLength);
    if (SCard_Status != SCARD_S_SUCCESS)
    {
        printf("\nProblem in SCardTransmit, Error code = 0x%04X, SCard_Status);
        return FALSE;
    }
    if(ucByteReceive[dwRecvLength-2] != 0x90 || ucByteReceive[dwRecvLength-1] !=
0x00)
    {
        printf("\nWrong return code: %02X%02X,
                ucByteReceive[dwRecvLength-2], ucByteReceive[dwRecvLength-1]);
        return FALSE;
    }
    return TRUE;
}
```

A.7.4 MIFARE 1K/4K Write (PC/SC 2.01)

```
BOOLEAN UpdateBinary(UCHAR BlockNr, UCHAR *ucDataToWrite, UCHAR ucDataLenght)
{
    ucByteSend[0] = 0xFF;//CLA
    ucByteSend[1] = 0xD6;//INS
    ucByteSend[2] = 0x00;//P1, MIFARE Block Number MSB, for MIFARE it is always
0x00
    ucByteSend[3] = BlockNr;//MIFARE Block Number LSB
    ucByteSend[4] = ucDataLenght;
    memcpy(ucByteSend+5,ucDataToWrite, ucDataLenght);
    ulnByteSend = 5+ucDataLenght;
    printf("\nUpdating Block .....");
    SCard_Status = SCardTransmit(hCard,SCARD_PCI_T1,ucByteSend,ulnByteSend,NULL,
        ucByteReceive, &dwRecvLength);
    if (SCard_Status != SCARD_S_SUCCESS)
    {
        printf("\nProblem in SCardTransmit, Error code = 0x%04X,SCard_Status);
        return FALSE;
    }
    if(ucByteReceive[dwRecvLength-2] != 0x90 || ucByteReceive[dwRecvLength-1] !=
0x00)
    {
        printf("\nWrong return code: %02X%02X,
            ucByteReceive[dwRecvLength-2],ucByteReceive[dwRecvLength-1]);
        return FALSE;
    }
    return TRUE;
}
```

A.7.5 MIFARE 1K/4K Read (PC/SC 2.01)

```

BOOLEAN ReadBinary(UCHAR BlockNr, UCHAR *ucDataRead, UCHAR &ucDataLenght)
{
    ucByteSend[0] = 0xFF;//CLA
    ucByteSend[1] = 0xB0;//INS
    ucByteSend[2] = 0x00;//P1, MIFARE Block Number MSB, for MIFARE it is always
0x00
    ucByteSend[3] = BlockNr;//MIFARE Block Number LSB
    ucByteSend[4] = 0x10;//Le
    ulnByteSend = 5;
    dwRecvLength = 255;
    printf(\nReading Block .....);
    SCard_Status = SCardTransmit(hCard,SCARD_PCI_T1,ucByteSend,ulnByteSend,NULL,
        ucByteReceive, &dwRecvLength);
    if (SCard_Status != SCARD_S_SUCCESS)
    {
        printf(\nProblem in SCardTransmit, Error code = 0x%04X,SCard_Status);
        return FALSE;
    }
    if(ucByteReceive[dwRecvLength-2] != 0x90 || ucByteReceive[dwRecvLength-1] !=
0x00)
    {
        printf(\nWrong return code: %02X%02X,
            ucByteReceive[dwRecvLength-2],ucByteReceive[dwRecvLength-1]);
        return FALSE;
    }
    ucDataLenght = (unsigned char)dwRecvLength -2;
    memcpy(ucDataRead,ucByteReceive,ucDataLenght);
    return TRUE;
}

```

A.7.6 MIFARE 1K/4K Increment (OMNIKEY Proprietary API)

```
BOOLEAN Increment(UCHAR BlockNr, UCHAR *ucDataTobeIncremented, UCHAR
ucDataLenght)
{
    ucByteSend[0] = 0xFF;//CLA
    ucByteSend[1] = 0xD4;//INS
    ucByteSend[2] = 0x00;//P1, MIFARE Block Number MSB, for MIFARE it is always
0x00
    ucByteSend[3] = BlockNr;//MIFARE Block Number LSB
    ucByteSend[4] = ucDataLenght;
    memcpy(ucByteSend+5,ucDataTobeIncremented, ucDataLenght);
    ulnByteSend = 5+ucDataLenght;
    printf("\nIncrementing Block .....");
    SCard_Status = SCardTransmit(hCard,SCARD_PCI_T1,ucByteSend,ulnByteSend,NULL,
        ucByteReceive, &dwRecvLength);
    if (SCard_Status != SCARD_S_SUCCESS)
    {
        printf("\nProblem in SCardTransmit, Error code = 0x%04X,SCard_Status);
        return FALSE;
    }
    if(ucByteReceive[dwRecvLength-2] != 0x90 || ucByteReceive[dwRecvLength-1] !=
0x00)
    {
        printf("\nWrong return code: %02X%02X,
            ucByteReceive[dwRecvLength-2],ucByteReceive[dwRecvLength-1]);
        return FALSE;
    }
    return TRUE;
}
```

A.7.7 MIFARE 1K/4K Decrement (OMNIKEY Proprietary API)

```

BOOLEAN Decrement(UCHAR BlockNr, UCHAR *ucDataTobeDecrement, UCHAR
ucDataLenght)
{
    ucByteSend[0] = 0xFF;//CLA
    ucByteSend[1] = 0xD8;//INS
    ucByteSend[2] = 0x00;//P1, MIFARE Block Number MSB, for MIFARE it is always
0x00
    ucByteSend[3] = BlockNr;//MIFARE Block Number LSB
    ucByteSend[4] = ucDataLenght;
    memcpy(ucByteSend+5,ucDataTobeDecrement, ucDataLenght);
    ulnByteSend = 5+ucDataLenght;
    printf("\nDecrementing Block .....");
    SCard_Status = SCardTransmit(hCard,SCARD_PCI_T1,ucByteSend,ulnByteSend,NULL,
        ucByteReceive, &dwRecvLength);
    if (SCard_Status != SCARD_S_SUCCESS)
    {
        printf("\nProblem in SCardTransmit, Error code = 0x%04X,SCard_Status);
        return FALSE;
    }
    if(ucByteReceive[dwRecvLength-2] != 0x90 || ucByteReceive[dwRecvLength-1] !=
0x00)
    {
        printf("\nWrong return code: %02X%02X,
            ucByteReceive[dwRecvLength- 2],ucByteReceive[dwRecvLength-1]);
        return FALSE;
    }
    return TRUE;
}

```

A.7.8 MIFARE Emulation Mode (OMNIKEY Proprietary API)

With the following code switch the MIFARE Emulation Mode on and off.

```

#define CM_IOCTL_SET_RFID_CONTROL_FLAGS    SCARD_CTL_CODE(3213)
DWORD    dwActiveProtocol;
//DWORD    dwControlFlag = 0xFFFFFFFF // On
DWORD    dwControlFlag = 0x00000004 // On
//DWORD    dwControlFlag = 0x00000000 // Off

BYTE    InBuffer[16];
BYTE    OutBuffer[16];
DWORD    dwInBufferSize ;
DWORD    dwOutBufferSize;
DWORD    dwBytesReturned;
DWORD    *Mask            = (DWORD *)InBuffer;
DWORD    *Value           = (DWORD *)InBuffer+1;
DWORD    dwControlCode    = CM_IOCTL_SET_RFID_CONTROL_FLAGS;

memset(InBuffer, 0x00, sizeof(InBuffer));
memset(OutBuffer, 0x00, sizeof(OutBuffer));

*Mask            = 0x00000004;
*Value           = dwControlFlag & *Mask;
dwInBufferSize  = 8;
dwOutBufferSize = 0;
dwBytesReturned = 0;

```



```

SCard_Status = SCardControl(hCard,
                            dwControlCode,
                            (LPCVOID)InBuffer,
                            dwInBufferSize,
                            (LPVOID)OutBuffer,
                            dwOutBufferSize,
                            &dwBytesReturned);

if (SCard_Status == SCARD_S_SUCCESS)
{
    if(dwControlFlag)
        sprintf(szText,MIFARE\t);
    else
        sprintf(szText,T=CL\t);
}
else
{
    sprintf(szText,IO Cntrol error\r);
}

// The card is disconnected after changing the MIFARE emulation mode
do
{
    sReaderState.szReader = szReaderName;
    sReaderState.dwCurrentState = SCARD_STATE_EMPTY;
    sReaderState.dwEventState = SCARD_STATE_EMPTY;
    SCardGetStatusChange(hContext, 50, &sReaderState, 1);
}
while((sReaderState.dwEventState & SCARD_STATE_PRESENT) == 0);
    
```

A.7.9 iCLASS Select Page (OMNIKEY Proprietary API)

The following code selects page 0x01 of an 8x2KS iCLASS card and returns the card serial number.

```

//Select page 0x02 of a 8x2KS iCLASS card
UCHAR ucDataSend[7] = {0};
ULONG ulNoOfDataSend = 7;
UCHAR ucReceivedData[64] = {0};
ULONG ulNoOfDataReceived = 64;

ucDataSend [0] = 0x80 //CLA, standard mode
ucDataSend [1] = 0xA6 //INS
ucDataSend [2] = 0x01 //P1
ucDataSend [3] = 0x04 //P2, return card serial number
ucDataSend [4] = 0x01 //Lc
ucDataSend [5] = 0x01 //Page number
ucDataSend [6] = 0x08 //Le

SCard_Status = SCardCLICCTransmit(hCard,ucDataSend,ulNoOfDataSend,
                                ucReceivedData,&ulNoOfDataReceived);
if(SCard_Status!= SCARD_S_SUCCESS)
{
    printf(Error in SCardCLICCTransmit, with error code %8X, SCard_Status);
    exit(-1);
}
    
```

A.7.10 EMVCo Contactless Level 2 Transactions

The following code example shows a typical OMNIKEY 5321 PAY transaction loop.

```

SCARDCONTEXT      hContext;
SCARDHANDLE       hCard;
SCARD_READERSTATE sReaderState;
CHAR*             szReaderName;
DWORD             dwShareMode;
DWORD             dwPreferredProtocols;
DWORD             dwActiveProtocols;
UCHAR             ucByteSend[256];
DWORD             dwNByteSend;
UCHAR             abByteReceive[256];
DWORD             dwRecvLength;
DWORD             SCard_Status;

UCHAR             abSelectPPSE[20] = {0x00,0xA4,0x04,0x00,           //
CLA,INS,..                               0x0E,                               // Lc
                                           0x32,0x50,0x41,0x59,0x2E,0x53,0x59, //
Data field                                0x53,0x2E,0x44,0x44,0x46,0x30,0x31,
                                           0x00};                               //
Le

// TODO: Code for PAY application

do
{
    // wait for card
    do
    {
        sReaderState.szReader = szReaderName;
        sReaderState.dwCurrentState = SCARD_STATE_EMPTY;
        sReaderState.dwEventState = SCARD_STATE_EMPTY;
        SCardGetStatusChange(hContext,30,&sReaderState,1);
        Sleep(20);
    }
    while((sReaderState.dwEventState & SCARD_STATE_PRESENT) == 0);

    if ((sReaderState.dwEventState & SCARD_STATE_MUTE) != 0)
    {
        // Card present, Collision detected

        // TODO: Code for PAY application

        // wait for remove card
        do
        {
            sReaderState.szReader = szReaderName;
            sReaderState.dwCurrentState = SCARD_STATE_PRESENT;
            sReaderState.dwEventState = SCARD_STATE_PRESENT;
            SCardGetStatusChange(hContext,30,&sReaderState,1);
            Sleep(20);
        }
        while((sReaderState.dwEventState & SCARD_STATE_EMPTY) == 0);
    }
}

```

```

        continue;
    }

    // TODO: Code for PAY application

    // Connect card

    dwShareMode = SCARD_SHARE_SHARED;
    dwPreferredProtocols = SCARD_PROTOCOL_T1;

    SCard_Status = SCardConnect( hContext,
                                szReaderName,
                                dwShareMode,
                                dwPreferredProtocols,
                                &hCard,
                                &dwActiveProtocols );

    // TODO: Code for PAY application

    memcpy( abByteSend, abSelectPPSE, 20);
    dwNByteSend = 20;
    do
    {
        dwRecvLength = 256;
        SCard_Status = SCardTransmit ( hCard,
                                       SCARD_PCI_T1,
                                       abByteSend,
                                       dwNByteSend,
                                       NULL,
                                       abByteReceive,
                                       &dwRecvLength );

        // TODO: Code for PAY application

    }
    while( /*TODO: Code for PAY application*/ );

    // now disconnect the card
    SCard_Status = SCardDisconnect( hCard, SCARD_UNPOWER_CARD );
    // TODO: Code for PAY application

    // wait for remove card
    do
    {
        sReaderState.szReader = szReaderName;
        sReaderState.dwCurrentState = SCARD_STATE_PRESENT;
        sReaderState.dwEventState = SCARD_STATE_PRESENT;
        SCardGetStatusChange(hContext, 30, &sReaderState, 1);
        Sleep(20);
    }
    while( (sReaderState.dwEventState & SCARD_STATE_EMPTY) == 0 );
    // TODO: Code for PAY application
}
while( /*TODO: Code for PAY application*/ );
// TODO: Code for PAY application

```

A.7.11 Set RFID operating mode

The following code example shows setting the operating mode:

```
#define CM_IOCTL_SET_OPERATION_MODE  SCARD_CTL_CODE (3107)
#define OPERATION_MODE_RFID_ISO      0x10
#define OPERATION_MODE_RFID_PAYPASS  0x11

BYTE    InBuffer[4];
BYTE    OutBuffer[4];
DWORD   dwInBufferSize;
DWORD   dwOutBufferSize;
DWORD   dwBytesReturned;
DWORD   dwControlCode = CM_IOCTL_SET_OPERATION_MODE;

memset(InBuffer, 0x00, sizeof(InBuffer));
memset(OutBuffer, 0x00, sizeof(OutBuffer));
*InBuffer    = OPERATION_MODE_RFID_PAYPASS
dwInBufferSize = 1;
dwOutBufferSize = 0;
dwBytesReturned = 0;

SCard_Status = SCardControl (hCard,
                             dwControlCode,
                             (LPCVOID)InBuffer,
                             dwInBufferSize,
                             (LPVOID)OutBuffer,
                             dwOutBufferSize,
                             &dwBytesReturned);
```

A.7.12 PayPass Signal MAIN LED

The following code example shows an application using the reader main LED.

```

#define CM_IOCTL_SIGNAL          SCARD_CTL_CODE (3058)
#define PAYPASS_SIGNAL_MAINLED  0x21

BYTE    InBuffer[4];
BYTE    OutBuffer[4];
DWORD   dwInBufferSize ;
DWORD   dwOutBufferSize;
DWORD   dwBytesReturned;
DWORD   dwControlCode;
BYTE    bUSBMode    = 0x01;           // USB Pipe Control
BYTE    bReaderLEDs = 0x02;           // red LED on
BYTE    bLEDMode     = 0x03;           // application controlled

// TODO: Code for PAY application

memset(InBuffer, 0x00, sizeof(InBuffer));
memset(OutBuffer, 0x00, sizeof(OutBuffer));

dwControlCode  = CM_IOCTL_SIGNAL;
InBuffer[0]    = PAYPASS_SIGNAL_MAINLED;
InBuffer[1]    = bUSBMode;
InBuffer[2]    = (bReaderLEDs) & 0x03;
InBuffer[3]    = bLEDMode;
dwInBufferSize = 4;
dwOutBufferSize = 0;
dwBytesReturned = 0;

SCard_Status = SCardControl( hCard,
                             dwControlCode,
                             (LPCVOID)InBuffer,
                             dwInBufferSize,
                             (LPVOID)OutBuffer,
                             dwOutBufferSize,
                             &dwBytesReturned );

if (SCard_Status != SCARD_S_SUCCESS)
{
    // TODO: Code for PAY application
}
// TODO: Code for PAY application
    
```

A.7.13 PayPass Signal Additional LEDs

The following code example shows an application using the three additional LEDs.

```
#define CM_IOCTL_SIGNAL          SCARD_CTL_CODE (3058)
#define PAYPASS_SIGNAL_ADDLED    0x22

BYTE    InBuffer[4];
BYTE    OutBuffer[4];
DWORD   dwInBufferSize ;
DWORD   dwOutBufferSize;
DWORD   dwBytesReturned;
DWORD   dwControlCode;

BYTE     bUSBMode    = 0x01;           // USB Pipe Control
BYTE     bReaderLEDs = 0x1C;           // all additional green LEDs on

memset(InBuffer, 0x00, sizeof(InBuffer));
memset(OutBuffer, 0x00, sizeof(OutBuffer));

dwControlCode    = CM_IOCTL_SIGNAL;
InBuffer[0]      = PAYPASS_SIGNAL_ADDLED;
InBuffer[1]      = bUSBMode;
InBuffer[2]      = (bReaderLEDs >> 2) & 0x07;
dwInBufferSize   = 3;
dwOutBufferSize  = 0;
dwBytesReturned  = 0;

SCard_Status = SCardControl( hCard,
                             dwControlCode,
                             (LPCVOID)InBuffer,
                             dwInBufferSize,
                             (LPVOID)OutBuffer,
                             dwOutBufferSize,
                             &dwBytesReturned );

if (SCard_Status != SCARD_S_SUCCESS)
{
    // TODO: Code for PAY application
}

// TODO: Code for PAY application
```

A.7.14 PayPass Signal Tone

The following code example shows an application using the buzzer.

```

#define CM_IOCTL_SIGNAL          SCARD_CTL_CODE (3058)
#define ACOUSTIC_SIGNAL_BEEPER_ON  0x10
#define ACOUSTIC_SIGNAL_BEEPER_OFF 0x11

BYTE    InBuffer[4];
BYTE    OutBuffer[4];
DWORD   dwInBufferSize ;
DWORD   dwOutBufferSize;
DWORD   dwBytesReturned;
DWORD   dwControlCode;

memset(InBuffer, 0x00, sizeof(InBuffer));
memset(OutBuffer, 0x00, sizeof(OutBuffer));

dwControlCode    = CM_IOCTL_SIGNAL;
InBuffer[0]      = ACOUSTIC_SIGNAL_BEEPER_ON;
dwInBufferSize  = 1;
dwOutBufferSize = 0;
dwBytesReturned = 0;

SCard_Status = SCardControl( hCard,
                             dwControlCode,
                             (LPCVOID)InBuffer,
                             dwInBufferSize,
                             (LPVOID)OutBuffer,
                             dwOutBufferSize,
                             &dwBytesReturned );

// TODO: Code for PAY application

memset(InBuffer, 0x00, sizeof(InBuffer));
memset(OutBuffer, 0x00, sizeof(OutBuffer));

dwControlCode    = CM_IOCTL_SIGNAL;
InBuffer[0]      = ACOUSTIC_SIGNAL_BEEPER_OFF;
dwInBufferSize  = 1;
dwOutBufferSize = 0;
dwBytesReturned = 0;

SCard_Status = SCardControl( hCard,
                             dwControlCode,
                             (LPCVOID)InBuffer,
                             dwInBufferSize,
                             (LPVOID)OutBuffer,
                             dwOutBufferSize,
                             &dwBytesReturned );

// TODO: Code for PAY application
    
```

Appendix: B Accessing iCLASS Memory

The following describes the free zones of two typical iCLASS memory layouts.

Memory Layout

Shown is the memory layout of an iCLASS 2KS, iCLASS 16KS or page 0 of an iCLASS 8x2KS card.

Block Number	Block Description (block size eight bytes)
'00'	card serial number
'01'	configuration block
'02'	e-Purse
'03'	Kd (so-called debit key, key for application 1)
'04'	Kc (so-called credit key, key for Application 2)
'05'	application issuer area
'06'	HID application
....	
'12'	
'13'	
....	Free zones in iCLASS 2KS, iCLASS 16KS or page 0 of iCLASS 8x2KS
'1F' (2KS)	
'FF' (16KS)	

Shown is the memory layout of an iCLASS 8x2KS on pages 1 to 7.

Block	Size: 8 bytes
'00'	card serial number
'01'	configuration block
'02'	e-Purse
'03'	Kd (so-called debit key, key for application 1)
'04'	Kc (so-called credit key, key for Application 2)
'05'	application issuer area
'06'	application 1 (free zones in iCLASS 8x2KS other than page 0)
....	
'xx'	
'xx'+1	application 2 (free zones in iCLASS 8x2KS other than page 0)
....	
'1F'	

Appendix: C Application 2 - Assigning Space

By default, iCLASS cards have the application limit set to the last byte of its respective memory area. This means the complete memory area is reserved for application 1 and the size of application 2 is set to zero. The application limit can be set to a different block number to support an additional application. To do this, the page's configuration block must be overwritten.

1. Select the page you want to configure.
2. Authenticate with the selected page Kd.
3. Read 8 bytes from block 0x01 - the configuration block.
4. Replace the first byte with the block number 'xx' of the new application limit.
5. Leave the remaining bytes of the configuration block unchanged and write all 8 bytes back to the configuration block 0x01.
6. Remove the card.

Appendix: D iCLASS Read/Write Memory - 2KS, 16KS or 8x2KS page 0

1. Insert card.
2. Connect to card.
3. For secured mode: Start Session.
4. Authenticate with K_{MCO} , (P1 = 0x01, P2 = 0x23).
If the key is not an iCLASS default key, the new key has to be loaded as K_{IAMC} or K_{VAK} , and in the authenticate command the key number of K_{IAMC} or K_{VAK} must be used.
5. Read/write any block (block number 0x13 to 0x1F for 2KS and 0xFF for 16KS).
6. For secured mode: End Session.
7. Disconnect from card.
8. Remove card.

Appendix: E iCLASS 8x2KS Card - Pages 1 to 7 Read/Write Memory

1. Insert card.
2. Connect to card.
3. For secured mode: Start Session.
4. Select page N (N = 1 to 7).
5. Authenticate with K_{MDN} / K_{MCN} (P1 = 0x00 for K_{MDN} , or 0x01 for K_{MCN} , P2 = K_{MDN} / K_{MCN} (See *Section 8.1 Key Numbering Scheme*).
6. If the key is other than iCLASS default key, the new key has to be loaded as K_{IAMC} or K_{VAK} , and in the authenticate command the key number of K_{IAMC} or K_{VAK} must be used.
7. Read/write any block (block number 0x13 to 0x1F for 2KS and 0xFF for 16KS).
8. For secured mode: End Session.
9. Disconnect card.
10. Remove card.

Appendix: F Terms and Abbreviations

The following lists abbreviations used throughout this document.

CSNR	Card Serial Number
HDH	Host Data Header
INSDData	Instruction Specific Data
K_{CUR}	Customer Read Key
K_{CUW}	Customer Write Key
K_{DOKM}	OMNIKEY Diversified Master Key
K_{ENC}	Card Data Encryption Key
K_{IAMC}	Key for Application 2 at page 0
K_{MCN}	Page N Application 2's Master Key of iCLASS card
K_{MDC}	HID Master Key Current
K_{MDN}	Page N Application 1's Master Key of iCLASS card
K_{MDNB1}	Page N Application 1's on Book 1 Master Key of iCLASS card
K_{MDO}	HID Master Key Old
K_{MTD}	PicoPass Master Transport key for application 1
K_{MTC}	PicoPass Master Transport key for application 2
K_{OKM}	OMNIKEY Master Key
K_S	Session Key
K_{VAK}	Any Volatile Application Master Key
LC_{INS}	Instruction specific data (INSDData) length.
LcR	Card Response data length
PCD	Proximity Coupling Device
PICC	Proximity IC Card
PPSE	Proximity Payment System Environment
RDH	Reader Data Header
RSNR	Reader Serial Number

Appendix: G References

- [DESFIRE] MIFARE DESFire Data Sheets
http://www.nxp.com/documents/short_data_sheet/MF3ICDX21_41_81_SDS.pdf
- [EMVCo] Europay Mastercard Visa Corporation
<http://www.emvco.com/approvals.aspx?id=86>
- [ICLASSD] iCLASS card specifications from HID.
- [ICODE SL2] ICODE SL2 Data Sheet
http://www.nxp.com/acrobat_download/other/identification/SL113730.pdf
- [ISO7816-4] Information Technology Identification Cards Integrated Circuit(s) Cards with Contacts, Part 4: Inter-industry Commands for Interchange
- [LRI64] ST Microelectronics datasheet for **LRI64**
- [MIFARE] MIFARE Data Sheets
http://www.nxp.com/acrobat_download2/other/identification/M001053_MF1ICS50_rev5_3.pdf
- [MSDNLIB] Microsoft Developer Network Library; <http://msdn.microsoft.com/library/>
- [PCSC_2.01] PC/SC Workgroup Specifications 2.01
<http://www.pcscworkgroup.com/>
- [PICO2KS] PICOTAG and PICOCRYPT secured 2KS data sheet from the Inside Contactless
- [PICO16KS] PICOTAG and PICOCRYPT secured 16KS data sheet from the Inside Contactless

